

# NAND Flash Memory

# MT29F16G08CBACA, MT29F32G08CFACA, MT29F16G08CBACB, MT29F32G08CFACB

# **Features**

- Open NAND Flash Interface (ONFI) 2.2-compliant<sup>1</sup>
- Multiple-level cell (MLC) technology
- Organization
  - Page size x8: 4320 bytes (4096 + 224 bytes)
  - Block size: 256 pages (1024K + 56K bytes)
  - Plane size: 2 planes x 1024 blocks per plane
  - Device size: 16Gb: 2048 blocks: 32Gb: 4096 blocks
- Synchronous I/O performance
  - Up to synchronous timing mode 4
  - Clock rate: 12ns (DDR)
  - Read/write throughput per pin: 166 MT/s
- Asynchronous I/O performance
  - Up to asynchronous timing mode 5
  - Read/write throughput per pin: 50 MT/s
- tRC/tWC: 20ns (MIN)
- Array performance
  - Read page: 75µs (MAX)
  - Program page: 1300us (TYP)
  - Erase block: 3.8ms (TYP)
- Operating Voltage Range
  - V<sub>CC</sub>: 2.7–3.6V
  - V<sub>CCO</sub>: 2.7-3.6V
- · Command set: ONFI NAND Flash Protocol
- Advanced Command Set
  - Program cache
  - Read cache sequential
  - Read cache random
  - One-time programmable (OTP) mode
  - Multi-plane commands
  - Multi-LUN operations
  - Read unique ID
  - Copyback
- First block (block address 00h) is valid when shipped from factory. For minimum required ECC, see Error Management (page 96).
- · RESET (FFh) required as first command after poweron

- Operation status byte provides software method for detecting
  - Operation completion \_
  - Pass/fail condition
  - Write-protect status
- Copyback operations supported within the plane from which data is read
- · Quality and reliability
  - Data retention: JESD47G compliant; see qualification report
  - Endurance: 3000 PROGRAM/ERASE cycles
- Operating temperature:
  - Commercial: 0°C to +70°C
  - Industrial (IT): –40°C to +85°C
- Package
  - 56-ball BGA
  - 48-pin TSOP
  - Note: 1. The ONFI 2.2 specification is available at www.onfi.org.

PDF: 09005aef841356b0 L72A\_16Gb\_32Gb\_Async\_Sync\_NAND.pdf - Rev. C 3/11 EN 1



# **Part Numbering Information**

Micron NAND Flash devices are available in different configurations and densities. Verify valid part numbers by using Micron's part catalog search at www.micron.com. To compare features and specifications by device type, visit www.micron.com/products. Contact the factory for devices not found.

#### Figure 1: Part Numbering



Note: 1. Pb-free package.



# Contents

General Description	9
Asynchronous and Synchronous Signal Descriptions	9
Signal Assignments	. 11
Package Dimensions	. 13
Architecture	. 15
Device and Array Organization	. 16
Bus Operation – Asynchronous Interface	. 19
Asynchronous Enable/Standby	. 19
Asynchronous Bus Idle	. 19
Asynchronous Commands	. 20
Asynchronous Addresses	. 21
Asynchronous Data Input	. 22
Asynchronous Data Output	. 23
Write Protect	. 24
Ready/Busy#	. 24
Bus Operation – Synchronous Interface	. 28
Synchronous Enable/Standby	. 29
Synchronous Bus Idle/Driving	. 29
Synchronous Commands	. 30
Synchronous Addresses	. 31
Synchronous DDR Data Input	. 32
Synchronous DDR Data Output	. 33
Write Protect	. 35
Ready/Busy#	. 35
Device Initialization	. 36
Activating Interfaces	. 37
Activating the Asynchronous Interface	. 37
Activating the Synchronous Interface	. 37
Command Definitions	. 39
Reset Operations	. 41
RESET (FFh)	. 41
SYNCHRONOUS RESET (FCh)	. 42
RESET LUN (FAh)	. 43
Identification Operations	. 44
READ ID (90h)	. 44
READ ID Parameter Tables	. 45
READ PARAMETER PAGE (ECh)	. 46
Parameter Page Data Structure Tables	. 47
READ UNIQUE ID (EDh)	. 54
Configuration Operations	. 55
SET FEATURES (EFh)	. 55
GET FEATURES (EEh)	. 56
Status Operations	. 60
READ STATUS (70h)	. 61
READ STATUS ENHANCED (78h)	. 62
Column Address Operations	. 63
CHANGE READ COLUMN (05h-E0h)	. 63
CHANGE READ COLUMN ENHANCED (06h-E0h)	. 64
CHANGE WRITE COLUMN (85h)	. 65
CHANGE ROW ADDRESS (85h)	. 66



Read Operations	. 68
READ MODE (00h)	. 70
READ PAGE (00h-30h)	. 71
READ PAGE CACHE SEQUENTIAL (31h)	. 72
READ PAGE CACHE RANDOM (00h-31h)	. 73
READ PAGE CACHE LAST (3Fh)	. 75
READ PAGE MULTI-PLANE (00h-32h)	. 76
Program Operations	. 78
PROGRAM PAGE (80h-10h)	. 78
PROGRAM PAGE CACHE (80h-15h)	. 80
PROGRAM PAGE MULTI-PLANE (80h-11h)	. 82
Erase Operations	. 84
ERASE BLOCK (60h-D0h)	. 84
ERASE BLOCK MULTI-PLANE (60h-D1h)	. 85
Copyback Operations	. 86
COPYBACK READ (00h-35h)	. 87
COPYBACK PROGRAM (85h–10h)	88
COPYBACK READ MILLTI-PLANE (00h-32h)	88
COPYBACK PROGRAM MILI TI-PI ANF (85h-11h)	. 00
One-Time Programmable (OTP) Operations	90
PROGRAM OTP PAGE (80h-10h)	91
PROTECT OTP AREA (80h-10h)	92
READ OTP PAGE (00h-30h)	93
Multi-Plane Operations	94
Multi-Plane Addressing	91
Interleaved Die (Multi-LUN) Operations	95
Fror Management	96
Shared Pages	97
Output Drive Impedance	99
AC Overshoot/IIndershoot Specifications	101
Synchronous Input Slew Rate	101
Output Slow Rate	102
Electrical Specifications	103
Electrical Specifications DC Characteristics and Operating Conditions (Asynchronous)	104
Electrical Specifications – DC Characteristics and Operating Conditions (Synchronous)	105
Electrical Specifications – DC Characteristics and Operating Conditions (Vers.)	100
Electrical Specifications – DC Characteristics and Operating Conditions ( $V_{CCQ}$ )	100
Electrical Specifications – AC Characteristics and Operating Conditions (Synchronous)	100
Electrical Specifications – AC Characteristics	112
Asymphropous Interface Timing Diagrams	112
Synchronous Interface Timing Diagrams	113
Davision History	174
Day C Droduction 2/11	140
Nev. C r10uucu011 – 5/11	140
Rev. D = 2/11	140
Kev. A – (/10	146



# **List of Figures**

Figure 1: 1	Part Numbering	. 2
Figure 2: 4	48-Pin TSOP Type 1 (Top View)	11
Figure 3: 5	56-Ball BGA (Ball-Down, Top View)	12
Figure 4: 4	48-Pin TSOP – Type 1 CPL (Package Code: WP)	13
Figure 5: 5	56-Ball VFBGA – 9.5mm x 12.8mm (Package Code: H5)	14
Figure 6: 1	NAND Flash Die (LUN) Functional Block Diagram	15
Figure 7: 1	Device Organization for Single-Die Package (TSOP/BGA)	16
Figure 8: 1	Device Organization for Two-Die Package (TSOP)	17
Figure 9: A	Array Organization per Logical Unit (LUN)	18
Figure 10:	Asynchronous Command Latch Cycle	20
Figure 11:	Asynchronous Address Latch Cycle	21
Figure 12:	Asynchronous Data Input Cycles	22
Figure 13:	Asynchronous Data Output Cycles	23
Figure 14:	Asynchronous Data Output Cycles (EDO Mode)	24
Figure 15:	READ/BUSY# Open Drain	25
Figure 16:	<sup>t</sup> Fall and <sup>t</sup> Rise ( $V_{CCO} = 2.7-3.6V$ )	26
Figure 17:	IOL vs Rp ( $V_{CCO} = 2.7-3.6V$ )	26
Figure 18:	TC vs Rp	27
Figure 19:	Synchronous Bus Idle/Driving Behavior	30
Figure 20:	Synchronous Command Cycle	31
Figure 21:	Synchronous Address Cycle	32
Figure 22:	Synchronous DDR Data Input Cycles	33
Figure 23:	Synchronous DDR Data Output Cycles	35
Figure 24:	R/B# Power-On Behavior	36
Figure 25:	Activating the Synchronous Interface	38
Figure 26:	RESET (FFh) Operation	41
Figure 27:	SYNCHRONOUS RESET (FCh) Operation	42
Figure 28:	RESET LUN (FAh) Operation	43
Figure 29:	READ ID (90h) with 00h Address Operation	44
Figure 30:	READ ID (90h) with 20h Address Operation	44
Figure 31:	READ PARAMETER (ECh) Operation	46
Figure 32:	READ UNIQUE ID (EDh) Operation	54
Figure 33:	SET FEATURES (EFh) Operation	56
Figure 34:	GET FEATURES (EEh) Operation	56
Figure 35:	READ STATUS (70h) Operation	62
Figure 36:	READ STATUS ENHANCED (78h) Operation	62
Figure 37:	CHANGE READ COLUMN (05h-E0h) Operation	63
Figure 38:	CHANGE READ COLUMN ENHANCED (06h-E0h) Operation	64
Figure 39:	CHANGE WRITE COLUMN (85h) Operation	65
Figure 40:	CHANGE ROW ADDRESS (85h) Operation	67
Figure 41:	READ PAGE (00h-30h) Operation	71
Figure 42:	READ PAGE CACHE SEQUENTIAL (31h) Operation	72
Figure 43:	READ PAGE CACHE RANDOM (00h-31h) Operation	74
Figure 44:	READ PAGE CACHE LAST (3Fh) Operation	75
Figure 45:	READ PAGE MULTI-PLANE (00h-32h) Operation	77
Figure 46:	PROGRAM PAGE (80h-10h) Operation	79
Figure 47:	PROGRAM PAGE CACHE (80h–15h) Operation (Start)	81
Figure 48:	PROGRAM PAGE CACHE (80h–15h) Operation (End)	81
Figure 49:	PROGRAM PAGE MULTI-PLANE (80h–11h) Operation	83
Figure 50:	ERASE BLOCK (60h-D0h) Operation	84
-		



Figure 51:	ERASE BLOCK MULTI-PLANE (60h–D1h) Operation	. 85
Figure 52:	COPYBACK READ (00h-35h) Operation	. 87
Figure 53:	COPYBACK READ (00h-35h) with CHANGE READ COLUMN (05h-E0h) Operation	. 87
Figure 54:	COPYBACK PROGRAM (85h–10h) Operation	. 88
Figure 55:	COPYBACK PROGRAM (85h-10h) with CHANGE WRITE COLUMN (85h) Operation	. 88
Figure 56:	COPYBACK PROGRAM MULTI-PLANE (85h-11h) Operation	. 89
Figure 57:	PROGRAM OTP PAGE (80h-10h) Operation	. 91
Figure 58:	PROGRAM OTP PAGE (80h-10h) with CHANGE WRITE COLUMN (85h) Operation	. 92
Figure 59:	PROTECT OTP AREA (80h-10h) Operation	. 93
Figure 60:	READ OTP PAGE (00h-30h) Operation	. 93
Figure 61:	Overshoot	101
Figure 62:	Undershoot	101
Figure 63:	RESET Operation	113
Figure 64:	RESET LUN Operation	113
Figure 65:	READ STATUS Cycle	114
Figure 66:	READ STATUS ENHANCED Cycle	114
Figure 67:	READ PARAMETER PAGE	115
Figure 68:	READ PAGE	115
Figure 69:	READ PAGE Operation with CE# "Don't Care"	116
Figure 70:	CHANGE READ COLUMN	117
Figure 71:	READ PAGE CACHE SEQUENTIAL	118
Figure 72:	READ PAGE CACHE BANDOM	119
Figure 73:	READ ID Operation	120
Figure 74	PROGRAM PAGE Operation	120
Figure 75:	PROGRAM PAGE Operation with CE# "Don't Care"	121
Figure 76	PROGRAM PAGE Operation with CHANGE WRITE COLUMN	121
Figure 77	PROGRAM PAGE CACHE	122
Figure 78	PROGRAM PAGE CACHE Ending on 15h	122
Figure 79	COPYBACK	123
Figure 80:	ERASE BLOCK Operation	123
Figure 81	SET FEATURES Operation	124
Figure 82:	READ ID Operation	125
Figure 83	GET FEATURES Operation	126
Figure 84	RESET (FCh) Operation	127
Figure 85	READ STATUS Cycle	128
Figure 86	READ STATUS ENHANCED Operation	129
Figure 87	READ PARAMETER PAGE Operation	130
Figure 88	READ PAGE Operation	131
Figure 89	CHANGE READ COLUMN	132
Figure 90:	READ PAGE CACHE SEQUENTIAL (1 of 2)	133
Figure 91	READ PAGE CACHE SEQUENTIAL (2 of 2)	134
Figure 92	READ PAGE CACHE BANDOM (1 of 2)	135
Figure 93	READ PAGE CACHE RANDOM (2 of 2)	135
Figure 94	Multi-Plane Read Page (1 of 2)	136
Figure 95	Multi-Plane Read Page (2 of 2)	137
Figure 96	PROGRAM PAGE Operation (1 of 2)	138
Figure 97	PROGRAM PAGE Operation (2 of 2)	138
Figure QR.	CHANGE WRITE COLUMN	130
Figure 90.	Multi-Plane Program Page	140
Figure 100	FRASE BLOCK	1/1
Figure 101	COPVBACK (1 of 3)	141
Figure 102	COPYBACK (2 of 3)	142
	· · · · · · · · · · · · · · · · · · ·	<del>-</del>



Figure 103:	COPYBACK (3 of 3)	142
Figure 104:	READ OTP PAGE	143
Figure 105:	PROGRAM OTP PAGE (1 of 2)	144
Figure 106:	PROGRAM OTP PAGE (2 of 2)	144
Figure 107:	PROTECT OTP AREA	145



# List of Tables

Table 1:	Asynchronous and Synchronous Signal Definitions	9
Table 2:	Array Addressing for Logical Unit (LUN)	18
Table 3:	Asynchronous Interface Mode Selection	19
Table 4:	Synchronous Interface Mode Selection	28
Table 5:	Command Set	39
Table 6:	Read ID Parameters for Address 00h	45
Table 7:	Read ID Parameters for Address 20h	45
Table 8:	Parameter Page Data Structure	47
Table 9:	Feature Address Definitions	55
Table 10:	Feature Address 01h: Timing Mode	57
Table 11:	Feature Addresses 10h and 80h: Programmable Output Drive Strength	58
Table 12:	Feature Addresses 81h: Programmable R/B# Pull-Down Strength	58
Table 13:	Feature Addresses 90h: Array Operation Mode	59
Table 14:	Status Register Definition	60
Table 15:	OTP Area Details	91
Table 16:	Error Management Details	96
Table 17:	Shared Pages	97
Table 18:	Output Drive Strength Conditions (V <sub>CCQ</sub> = 2.7–3.6V)	99
Table 19:	Output Drive Strength Impedance Values (V <sub>CCQ</sub> = 2.7–3.6V)	99
Table 20:	Pull-Up and Pull-Down Output Impedance Mismatch	100
Table 21:	Overshoot/Undershoot Parameters	101
Table 22:	Test Conditions for Input Slew Rate	102
Table 23:	Input Slew Rate (V <sub>CCQ</sub> = 2.7–3.6V)	102
Table 24:	Test Conditions for Output Slew Rate	103
Table 25:	Output Slew Rate (V <sub>CCQ</sub> = 2.7–3.6V)	103
Table 26:	Absolute Maximum Ratings by Device	104
Table 27:	Recommended Operating Conditions	104
Table 28:	Valid Blocks per LUN	104
Table 29:	Capacitance: 48-Pin TSOP Package	104
Table 30:	Capacitance: 56-Ball BGA Package	105
Table 31:	Test Conditions	105
Table 32:	DC Characteristics and Operating Conditions (Asynchronous Interface)	105
Table 33:	DC Characteristics and Operating Conditions (Synchronous Interface)	106
Table 34:	DC Characteristics and Operating Conditions	106
Table 35:	AC Characteristics: Asynchronous Command, Address, and Data	107
Table 36:	AC Characteristics: Synchronous Command, Address, and Data	109
Table 37:	Array Characteristics	112



### 16Gb, 32Gb Asynchronous/Synchronous NAND General Description

# **General Description**

Micron NAND Flash devices include an asynchronous data interface for high-performance I/O operations. These devices use a highly multiplexed 8-bit bus (DQx) to transfer commands, address, and data. There are five control signals used to implement the asynchronous data interface: CE#, CLE, ALE, WE#, and RE#. Additional signals control hardware write protection (WP#) and monitor device status (R/B#).

This Micron NAND Flash device additionally includes a synchronous data interface for high-performance I/O operations. When the synchronous interface is active, WE# becomes CLK and RE# becomes W/R#. Data transfers include a bidirectional data strobe (DQS).

This hardware interface creates a low pin-count device with a standard pinout that remains the same from one density to another, enabling future upgrades to higher densities with no board redesign.

A target is the unit of memory accessed by a chip enable signal. A target contains one or more NAND Flash die. A NAND Flash die is the minimum unit that can independently execute commands and report status. A NAND Flash die, in the ONFI specification, is referred to as a logical unit (LUN). For further details, see Device and Array Organization.

# **Asynchronous and Synchronous Signal Descriptions**

Asynchronous Signal <sup>1</sup>	Synchronous Signal <sup>1</sup>	Туре	Description <sup>2</sup>
ALE	ALE	Input	Address latch enable: Loads an address from DQx into the address register.
CE#	CE#	Input	Chip enable: Enables or disables one or more die (LUNs) in a target <sup>1</sup> .
CLE	CLE	Input	<b>Command latch enable:</b> Loads a command from DQx into the command register.
DQx	DQx	I/O	<b>Data inputs/outputs:</b> The bidirectional I/Os transfer address, data, and command information.
-	DQS	I/O	<b>Data strobe:</b> Provides a synchronous reference for data input and output.
RE#	W/R#	Input	<b>Read enable and write/read:</b> RE# transfers serial data from the NAND Flash to the host system when the asynchronous interface is active. When the synchronous interface is active, W/R# controls the direction of DQx and DQS.
WE#	CLK	Input	<b>Write enable and clock:</b> WE# transfers commands, addresses, and serial data from the host system to the NAND Flash when the asynchronous interface is active. When the synchronous interface is active, CLK latches command and address cycles.
WP#	WP#	Input	Write protect: Enables or disables array PROGRAM and ERASE opera- tions.
R/B#	R/B#	Output	<b>Ready/busy:</b> An open-drain, active-low output that requires an external pull-up resistor. This signal indicates target array activity.
V <sub>cc</sub>	V <sub>CC</sub>	Supply	V <sub>CC</sub> : Core power supply

 Table 1: Asynchronous and Synchronous Signal Definitions



### 16Gb, 32Gb Asynchronous/Synchronous NAND Asynchronous and Synchronous Signal Descriptions

#### Table 1: Asynchronous and Synchronous Signal Definitions (Continued)

Asynchronous Signal <sup>1</sup>	Synchronous Signal <sup>1</sup>	Туре	Description <sup>2</sup>
V <sub>CCQ</sub>	V <sub>CCQ</sub>	Supply	V <sub>CCQ</sub> : I/O power supply
V <sub>SS</sub>	V <sub>SS</sub>	Supply	V <sub>ss</sub> : Core ground connection
V <sub>SSQ</sub>	V <sub>SSQ</sub>	Supply	V <sub>ssq</sub> : I/O ground connection
NC	NC	-	<b>No connect:</b> NCs are not internally connected. They can be driven or left unconnected.
DNU	DNU	_	Do not use: DNUs must be left unconnected.
RFU	RFU	_	Reserved for future use: RFUs must be left unconnected.

Notes: 1. See Device and Array Organization for detailed signal connections.

2. See Bus Operation – Asynchronous Interface (page 19) and Bus Operation – Synchronous Interface (page 28) for detailed asynchronous and synchronous interface signal descriptions.



#### 16Gb, 32Gb Asynchronous/Synchronous NAND Signal Assignments

# **Signal Assignments**

#### Figure 2: 48-Pin TSOP Type 1 (Top View)



- Notes: 1. CE2# and R/B2# are available on dual die packages. They are NC for other configurations.
  - 2. These  $V_{CCQ}$  and  $V_{SSQ}$  pins are for compatibility with ONFI 2.2. If not supplying  $V_{CCQ}$  or  $V_{SSQ}$  to these pins, do not use them.



# 16Gb, 32Gb Asynchronous/Synchronous NAND Signal Assignments

#### Figure 3: 56-Ball BGA (Ball-Down, Top View)





### 16Gb, 32Gb Asynchronous/Synchronous NAND Package Dimensions

# **Package Dimensions**

Figure 4: 48-Pin TSOP – Type 1 CPL (Package Code: WP)



Note: 1. All dimensions are in millimeters.



# 16Gb, 32Gb Asynchronous/Synchronous NAND Package Dimensions

#### Figure 5: 56-Ball VFBGA – 9.5mm x 12.8mm (Package Code: H5)



Note: 1. All dimensions are in millimeters.



#### 16Gb, 32Gb Asynchronous/Synchronous NAND Architecture

# Architecture

These devices use NAND Flash electrical and command interfaces. Data, commands, and addresses are multiplexed onto the same pins and received by I/O control circuits. The commands received at the I/O control circuits are latched by a command register and are transferred to control logic circuits for generating internal signals to control device operations. The addresses are latched by an address register and sent to a row decoder to select a row address, or to a column decoder to select a column address.

Data is transferred to or from the NAND Flash memory array, byte by byte, through a data register and a cache register.

The NAND Flash memory array is programmed and read using page-based operations and is erased using block-based operations. During normal page operations, the data and cache registers act as a single register. During cache operations, the data and cache registers operate independently to increase data throughput.

The status register reports the status of die (LUN) operations.

#### Figure 6: NAND Flash Die (LUN) Functional Block Diagram



Notes: 1. N/A: This signal is tri-stated when the asynchronous interface is active.2. Some devices do not include the synchronous interface.



# 16Gb, 32Gb Asynchronous/Synchronous NAND Device and Array Organization

# **Device and Array Organization**

#### Figure 7: Device Organization for Single-Die Package (TSOP/BGA)



Note: 1. BGA devices do not support the synchronous interface.



### 16Gb, 32Gb Asynchronous/Synchronous NAND Device and Array Organization

#### Figure 8: Device Organization for Two-Die Package (TSOP)



### 16Gb, 32Gb Asynchronous/Synchronous NAND Device and Array Organization

#### Figure 9: Array Organization per Logical Unit (LUN)



#### Table 2: Array Addressing for Logical Unit (LUN)

Cycle	DQ7	DQ6	DQ5	DQ4	DQ3	DQ2	DQ1	DQ0
First	CA7	CA6	CA5	CA4	CA3	CA2	CA1	CA0 <sup>2</sup>
Second	LOW	LOW	LOW	CA12 <sup>3</sup>	CA11	CA10	CA9	CA8
Third	PA7	PA6	PA5	PA4	PA3	PA2	PA1	PA0
Fourth	BA15	BA14	BA13	BA12	BA11	BA10	BA9	BA8 <sup>4</sup>
Fifth	LOW	LOW	LOW	LOW	LA0 <sup>5</sup>	BA18	BA17	BA16

Notes: 1. CAx = column address, PAx = page address, BAx = block address, LAx = LUN address; the page address, block address, and LUN address are collectively called the row address.

2. When using the synchronous interface, CA0 is forced to 0 internally; one data cycle always returns one even byte and one odd byte.

3. Column addresses 4320 (10E0h) through 8191 (1FFFh) are invalid, out of bounds, do not exist in the device, and cannot be addressed.

4. BA[8] is the plane-select bit:

Plane 0: BA[8] = 0

Plane 1: BA[8] = 1

5. LA0 is the LUN-select bit. It is present only when two LUNs are shared on the target; otherwise, it should be held LOW.

LUN 0: LA0 = 0

LUN 1: LA0 = 1



# **Bus Operation – Asynchronous Interface**

The asynchronous interface is active when the NAND Flash device powers on. The I/O bus, DQ[7:0], is multiplexed sharing data I/O, addresses, and commands. The DQS signal, if present, is tri-stated when the asynchronous interface is active.

Asynchronous interface bus modes are summarized below.

Mode	CE#	CLE	ALE	WE#	RE#	DQS	DQx	WP#	Notes
Standby	н	Х	Х	Х	Х	Х	X	0V/V <sub>CCQ</sub> <sup>2</sup>	2
Bus idle	L	Х	X	н	Н	Х	X	Х	
Command input	L	Н	L		Н	Х	input	Н	
Address input	L	L	Н		Н	Х	input	Н	
Data input	L	L	L	L	Н	Х	input	н	
Data output	L	L	L	Н	₹	Х	output	Х	
Write protect	Х	Х	X	Х	Х	Х	Х	L	

#### Table 3: Asynchronous Interface Mode Selection

Notes: 1. DQS is tri-stated when the asynchronous interface is active.

- 2. WP# should be biased to CMOS LOW or HIGH for standby.
- 3. Mode selection settings for this table: H = Logic level HIGH; L = Logic level LOW; X =  $V_{IH}$  or  $V_{IL}$ .

### **Asynchronous Enable/Standby**

A chip enable (CE#) signal is used to enable or disable a target. When CE# is driven LOW, all of the signals for that target are enabled. With CE# LOW, the target can accept commands, addresses, and data I/O. There may be more than one target in a NAND Flash package. Each target is controlled by its own chip enable; the first target (Target 0) is controlled by CE#; the second target (if present) is controlled by CE2#, etc.

A target is disabled when CE# is driven HIGH, even when the target is busy. When disabled, all of the target's signals are disabled except CE#, WP#, and R/B#. This functionality is also known as CE# "Don't Care". While the target is disabled, other devices can utilize the disabled NAND signals that are shared with the NAND Flash.

A target enters low-power standby when it is disabled and is not busy. If the target is busy when it is disabled, the target enters standby after all of the die (LUNs) complete their operations. Standby helps reduce power consumption.

### **Asynchronous Bus Idle**

A target's bus is idle when CE# is LOW, WE# is HIGH, and RE# is HIGH.

During bus idle, all of the signals are enabled except DQS, which is not used when the asynchronous interface is active. No commands, addresses, and data are latched into the target; no data is output.



# **Asynchronous Commands**

An asynchronous command is written from DQ[7:0] to the command register on the rising edge of WE# when CE# is LOW, ALE is LOW, CLE is HIGH, and RE# is HIGH.

Commands are typically ignored by die (LUNs) that are busy (RDY = 0); however, some commands, including READ STATUS (70h) and READ STATUS ENHANCED (78h), are accepted by die (LUNs) even when they are busy.

#### Figure 10: Asynchronous Command Latch Cycle





# **Asynchronous Addresses**

An asynchronous address is written from DQ[7:0] to the address register on the rising edge of WE# when CE# is LOW, ALE is HIGH, CLE is LOW, and RE# is HIGH.

Bits that are not part of the address space must be LOW (see Device and Array Organization). The number of cycles required for each command varies. Refer to the command descriptions to determine addressing requirements (see Command Definitions).

Addresses are typically ignored by die (LUNs) that are busy (RDY = 0); however, some addresses are accepted by die (LUNs) even when they are busy; for example, address cycles that follow the READ STATUS ENHANCED (78h) command.

#### Figure 11: Asynchronous Address Latch Cycle





# **Asynchronous Data Input**

Data is written from DQ[7:0] to the cache register of the selected die (LUN) on the rising edge of WE# when CE# is LOW, ALE is LOW, CLE is LOW, and RE# is HIGH.

Data input is ignored by die (LUNs) that are not selected or are busy (RDY = 0).







### **Asynchronous Data Output**

Data can be output from a die (LUN) if it is in a READY state. Data output is supported following a READ operation from the NAND Flash array. Data is output from the cache register of the selected die (LUN) to DQ[7:0] on the falling edge of RE# when CE# is LOW, ALE is LOW, CLE is LOW, and WE# is HIGH.

If the host controller is using a <sup>t</sup>RC of 30ns or greater, the host can latch the data on the rising edge of RE# (see Figure 13 for proper timing). If the host controller is using a <sup>t</sup>RC of less than 30ns, the host can latch the data on the next falling edge of RE# (see Figure 14 (page 24) for extended data output (EDO) timing).

Using the READ STATUS ENHANCED (78h) command prevents data contention following an interleaved die (multi-LUN) operation. After issuing the READ STATUS EN-HANCED (78h) command, to enable data output, issue the READ MODE (00h) command.

Data output requests are typically ignored by a die (LUN) that is busy (RDY = 0); however, it is possible to output data from the status register even when a die (LUN) is busy by first issuing the READ STATUS (70h) or READ STATUS ENHANCED (78h) command.



#### Figure 13: Asynchronous Data Output Cycles



#### Figure 14: Asynchronous Data Output Cycles (EDO Mode)



#### Write Protect

The write protect# (WP#) signal enables or disables PROGRAM and ERASE operations to a target. When WP# is LOW, PROGRAM and ERASE operations are disabled. When WP# is HIGH, PROGRAM and ERASE operations are enabled.

It is recommended that the host drive WP# LOW during power-on until Vcc and Vccq are stable to prevent inadvertent PROGRAM and ERASE operations (see Device Initialization (page 36) for additional details).

WP# must be transitioned only when the target is not busy and prior to beginning a command sequence. After a command sequence is complete and the target is ready, WP# can be transitioned. After WP# is transitioned, the host must wait <sup>t</sup>WW before issuing a new command.

The WP# signal is always an active input, even when CE# is HIGH. This signal should not be multiplexed with other signals.

### Ready/Busy#

The ready/busy# (R/B#) signal provides a hardware method of indicating whether a target is ready or busy. A target is busy when one or more of its die (LUNs) are busy (RDY = 0). A target is ready when all of its die (LUNs) are ready (RDY = 1). Because each die (LUN) contains a status register, it is possible to determine the independent status of each die (LUN) by polling its status register instead of using the R/B# signal (see Status Operations (page 60) for details regarding die (LUN) status).

This signal requires a pull-up resistor, Rp, for proper operation. R/B# is HIGH when the target is ready, and transitions LOW when the target is busy. The signal's open-drain



driver enables multiple R/B# outputs to be OR-tied. Typically, R/B# is connected to an interrupt pin on the system controller (see Figure 15 (page 25)).

The combination of Rp and capacitive loading of the R/B# circuit determines the rise time of the R/B# signal. The actual value used for Rp depends on the system timing requirements. Large values of Rp cause R/B# to be delayed significantly. Between the 10-to 90-percent points on the R/B# waveform, the rise time is approximately two time constants (TC).

$$TC = R \times C$$

Where R = Rp (resistance of pull-up resistor), and C = total capacitive load.

The fall time of the R/B# signal is determined mainly by the output impedance of the R/B# signal and the total load capacitance. Approximate Rp values using a circuit load of 100pF are provided in Figure 18 (page 27).

The minimum value for Rp is determined by the output drive capability of the R/B# signal, the output voltage swing, and Vccq.

$$Rp = \frac{Vcc (MAX) - Vol (MAX)}{IOL + \Sigma iI}$$

Where  $\Sigma$  is the sum of the input currents of all devices tied to the R/B# pin.

#### Figure 15: READ/BUSY# Open Drain





#### Figure 16: <sup>t</sup>Fall and <sup>t</sup>Rise (V<sub>CCQ</sub> = 2.7-3.6V)



- Notes: 1. <sup>t</sup>FALL is V<sub>OH(DC)</sub> to V<sub>OL(AC)</sub> and <sup>t</sup>RISE is V<sub>OL(DC)</sub> to V<sub>OH(AC)</sub>.
  - 2. <sup>t</sup>Rise dependent on external capacitance and resistive loading and output transistor impedance.
  - 3. <sup>t</sup>Rise primarily dependent on external pull-up resistor and external capacitive loading.
  - 4. <sup>t</sup>Fall = 10ns at 3.3V
  - 5. See TC values in Figure 18 (page 27) for approximate Rp value and TC.







Figure 18: TC vs Rp





# **Bus Operation – Synchronous Interface**

These NAND Flash devices have two interfaces—a synchronous interface for fast data I/O transfer and an asynchronous interface that is backward compatible with existing NAND Flash devices.

The NAND Flash command protocol for both the asynchronous and synchronous interfaces is identical. However, there are some differences betweeen the asynchronous and synchronous interfaces when issuing command, address, and data I/O cycles using the NAND Flash signals.

When the synchronous interface is activated on a target (see Activating Interfaces (page 37)), the target is capable of high-speed DDR data transfers. Existing signals are redefined for high-speed DDR I/O. The WE# signal becomes CLK. DQS is enabled. The RE# signal becomes W/R#. CLK provides a clock reference to the NAND Flash device.

DQS is a bidirectional data strobe. During data output, DQS is driven by the NAND Flash device. During data input, DQS is controlled by the host controller while input-ting data on DQ[7:0].

The direction of DQS and DQ[7:0] is controlled by the W/R# signal. When the W/R# signal is latched HIGH, the controller is driving the DQ bus and DQS. When the W/R# is latched LOW, the NAND Flash is driving the DQ bus and DQS.

The synchronous interface bus modes are summarized below.

Mode	CE#	CLE	ALE	CLK	W/R#	DQS	DQ[7:0]	WP#	Notes
Standby	Н	Х	Х	Х	Х	Х	Х	0V/V <sub>CCQ</sub>	1, 2
Bus idle	L	L	L	L∎	Н	X	х	х	
Bus driv- ing	L	L	L	٦Æ	L	output	output	Х	
Command input	L	Н	L	<b>⊥</b> ∙	Н	Х	input	Н	3
Address input	L	L	Н	٦Æ	Н	X	input	Н	3
Data input	L	Н	Н	₽	Н	_ <b>▲</b> ₹	input	Н	4
Data out- put	L	Н	Н	<b>₽</b>	L	See Note 5	output	Х	5
Write pro- tect	Х	х	X	х	х	X	х	L	
Undefined	L	L	Н		L	output	output	х	
Undefined	L	н	L		L	output	output	х	

#### **Table 4: Synchronous Interface Mode Selection**

Notes: 1. CLK can be stopped when the target is disabled, even when R/B# is LOW.

2. WP# should be biased to CMOS LOW or HIGH for standby.

- 3. Commands and addresses are latched on the rising edge of CLK.
- 4. During data input to the device, DQS is the "clock" that latches the data in the cache register.



- 5. During data output from the NAND Flash device, DQS is an output generated from CLK after <sup>t</sup>DQSCK delay.
- 6. Mode selection settings for this table: H = Logic level HIGH; L = Logic level LOW; X =  $V_{IH}$  or  $V_{IL}$ .

#### Synchronous Enable/Standby

In addition to the description found in Asynchronous Enable/Standby (page 19), the following requirements also apply when the synchronous interface is active.

Before enabling a target, CLK must be running and ALE and CLE must be LOW. When CE# is driven LOW, all of the signals for the selected target are enabled. The target is not enabled until <sup>t</sup>CS completes; the target's bus is then idle.

Prior to disabling a target, the target's bus must be idle. A target is disabled when CE# is driven HIGH, even when it is busy. All of the target's signals are disabled except CE#, WP#, and R/B#. After the target is disabled, CLK can be stopped.

A target enters low-power standby when it is disabled and is not busy. If the target is busy when it is disabled, the target enters standby after all of the die (LUNs) complete their operations.

#### **Synchronous Bus Idle/Driving**

A target's bus is idle or driving when CLK is running, CE# is LOW, ALE is LOW, and CLE is LOW.

The bus is idle when W/R# transitions HIGH and is latched by CLK. During the bus idle mode, all signals are enabled; DQS and DQ[7:0] are inputs. No commands, addresses, or data are latched into the target; no data is output. When entering the bus idle mode, the host must wait a minimum of <sup>t</sup>CAD before changing the bus mode. In the bus idle mode, the only valid bus modes supported are: bus driving, command, address, and DDR data input.

The bus is driving when W/R# transitions LOW and is latched by CLK. During the bus driving mode, all signals are enabled; DQS is LOW and DQ[7:0] is driven LOW or HIGH, but no valid data is output. Following the bus driving mode, the only valid bus modes supported are bus idle and DDR data output.



#### Figure 19: Synchronous Bus Idle/Driving Behavior



Note: 1. Only the selected die (LUN) drives DQS and DQ[7:0]. During an interleaved die (multi-LUN) operation, the host must use the READ STATUS ENHANCED (78h) to prevent data output contention.

### **Synchronous Commands**

A command is written from DQ[7:0] to the command register on the rising edge of CLK when CE# is LOW, ALE is LOW, CLE is HIGH, and W/R# is HIGH.

After a command is latched—and prior to issuing the next command, address, or data I/O—the bus must go to bus idle mode on the next rising edge of CLK, except when the clock period, <sup>t</sup>CK, is greater than <sup>t</sup>CAD.

Commands are typically ignored by die (LUNs) that are busy (RDY = 0); however, some commands, such as READ STATUS (70h) and READ STATUS ENHANCED (78h), are accepted by die (LUNs), even when they are busy.



#### Figure 20: Synchronous Command Cycle



Note: 1. When CE# remains LOW, <sup>t</sup>CAD begins at the rising edge of the clock from which the command cycle is latched for subsequent command, address, data input, or data output cycle(s).

#### **Synchronous Addresses**

A synchronous address is written from DQ[7:0] to the address register on the rising edge of CLK when CE# is LOW, ALE is HIGH, CLE is LOW, and W/R# is HIGH.

After an address is latched—and prior to issuing the next command, address, or data I/O —the bus must go to bus idle mode on the next rising edge of CLK, except when the clock period, <sup>t</sup>CK, is greater than <sup>t</sup>CAD.

Bits not part of the address space must be LOW (see Device and Array Organization). The number of address cycles required for each command varies. Refer to the command descriptions to determine addressing requirements.

Addresses are typically ignored by die (LUNs) that are busy (RDY = 0); however, some addresses such as address cycles that follow the READ STATUS ENHANCED (78h) command, are accepted by die (LUNs), even when they are busy.



#### Figure 21: Synchronous Address Cycle



Note: 1. When CE# remains LOW, <sup>t</sup>CAD begins at the rising edge of the clock from which the command cycle is latched for subsequent command, address, data input, or data output cycle(s).

### Synchronous DDR Data Input

To enter the DDR data input mode, the following conditions must be met:

- CLK is running
- CE# is LOW
- W/R# is HIGH
- <sup>t</sup>CAD is met
- DQS is LOW
- ALE and CLE are HIGH on the rising edge of CLK

Upon entering the DDR data input mode after <sup>t</sup>DQSS, data is written from DQ[7:0] to the cache register on each and every rising and falling edge of DQS (center-aligned) when CLK is running and the DQS to CLK skew meets <sup>t</sup>DSH and <sup>t</sup>DSS, CE# is LOW, W/R# is HIGH, and ALE and CLE are HIGH on the rising edge of CLK.

To exit DDR data input mode, the following conditions must be met:

- CLK is running and the DQS to CLK skew meets <sup>t</sup>DSH and <sup>t</sup>DSS
- CE# is LOW
- W/R# is HIGH
- ALE and CLE are latched LOW on the rising edge of CLK



- The final two data bytes of the data input sequence are written to DQ[7:0] to the cache register on the rising and falling edges of DQS after the last cycle in the data input sequence in which ALE and CLE are latched HIGH.
- DQS is held LOW for  ${}^t\!WPST$  (after the final falling edge of DQS)

Following <sup>t</sup>WPST, the bus enters bus idle mode and <sup>t</sup>CAD begins on the next rising edge of CLK. After <sup>t</sup>CAD starts, the host can disable the target if desired.

Data input is ignored by die (LUNs) that are not selected or are busy.



#### Figure 22: Synchronous DDR Data Input Cycles

- Notes: 1. When CE# remains LOW, <sup>t</sup>CAD begins at the first rising edge of the clock after <sup>t</sup>WPST completes.
  - 2. <sup>t</sup>DSH (MIN) generally occurs during <sup>t</sup>DQSS (MIN).
  - 3. <sup>t</sup>DSS (MIN) generally occurs during <sup>t</sup>DQSS (MAX).

# Synchronous DDR Data Output

Data can be output from a die (LUN) if it is ready. Data output is supported following a READ operation from the NAND Flash array.

To enter the DDR data output mode, the following conditions must be met:

- CLK is running
- CE# is LOW
- The host has released the DQ[7:0] bus and DQS
- W/R# is latched LOW on the rising edge of CLK to enable the selected die (LUN) to take ownership of the DQ[7:0] bus and DQS within <sup>t</sup>WRCK
- <sup>t</sup>CAD is met
- ALE and CLE are HIGH on the rising edge of CLK



Upon entering the DDR data output mode, DQS will toggle HIGH and LOW with a delay of <sup>t</sup>DQSCK from the respective rising and falling edges of CLK. DQ[7:0] will output data edge-aligned to the rising and falling edges of DQS, with the first transition delayed by no more than <sup>t</sup>AC.

DDR data output mode continues as long as CLK is running, CE# is LOW, W/R# is LOW, and ALE and CLE are HIGH on the rising edge of CLK.

To exit DDR data output mode, the following conditions must be met:

- CLK is running
- CE# is LOW
- W/R# is LOW
- ALE and CLE are latched LOW on the rising edge of CLK

The final two data bytes are output on DQ[7:0] on the final rising and falling edges of DQS. The final rising and falling edges of DQS occur <sup>t</sup>DQSCK after the last cycle in the data output sequence in which ALE and CLE are latched HIGH. After <sup>t</sup>CKWR, the bus enters bus idle mode and <sup>t</sup>CAD begins on the next rising edge of CLK. Once <sup>t</sup>CAD starts the host can disable the target if desired.

Data output requests are typically ignored by a die (LUN) that is busy (RDY = 0); however, it is possible to output data from the status register even when a die (LUN) is busy by issuing the READ STATUS (70h) or READ STATUS ENHANCED (78h) command.







- Notes: 1. When CE# remains LOW, <sup>t</sup>CAD begins at the rising edge of the clock after <sup>t</sup>CKWR for subsequent command or data output cycle(s).
  - 2. See Figure 20 (page 31) for details of W/R# behavior.
  - 3. <sup>t</sup>AC is the DQ output window relative to CLK and is the long-term component of DQ skew.
  - 4. For W/R# transitioning HIGH, DQ[7:0] and DQS go to tri-state.
  - 5. For W/R# transitioning LOW, DQ[7:0] drives current state and DQS goes LOW.
  - 6. After final data output, DQ[7:0] is driven until W/R# goes HIGH, but is not valid.

### **Write Protect**

See Write Protect (page 24).

# Ready/Busy#

See Ready/Busy# (page 24).



# **Device Initialization**

Some NAND Flash devices do not support  $V_{CCQ}$ . For these devices all references to  $V_{CCQ}$  are replaced with  $V_{CC}$ .

Micron NAND Flash devices are designed to prevent data corruption during power transitions.  $V_{CC}$  is internally monitored. (The WP# signal supports additional hardware protection during power transitions.) When ramping  $V_{CC}$  and  $V_{CCQ}$ , use the following procedure to initialize the device:

- 1. Ramp V<sub>CC</sub>.
- 2. Ramp  $V_{CCQ}$ .  $V_{CCQ}$  must not exceed  $V_{CC}$ .
- 3. The host must wait for R/B# to be valid and HIGH before issuing RESET (FFh) to any target (see Figure 24). The R/B# signal becomes valid when 50µs has elapsed since the beginning the  $V_{CC}$  ramp, and 10µs has elapsed since  $V_{CCQ}$  reaches  $V_{CCQ}$  (MIN) and  $V_{CC}$  reaches  $V_{CC}$  (MIN).
- 4. If not monitoring R/B#, the host must wait at least 100 $\mu$ s after V<sub>CCQ</sub> reaches V<sub>CCQ</sub> (MIN) and V<sub>CC</sub> reaches V<sub>CC</sub> (MIN). If monitoring R/B#, the host must wait until R/B# is HIGH.
- 5. The asynchronous interface is active by default for each target. Each LUN draws less than an average of  $10mA (I_{ST})$  measured over intervals of 1ms until the RESET (FFh) command is issued.
- 6. The RESET (FFh) command must be the first command issued to all targets (CE#s) after the NAND Flash device is powered on. Each target will be busy for <sup>t</sup>POR after a RESET command is issued. The RESET busy time can be monitored by polling R/B# or issuing the READ STATUS (70h) command to poll the status register.
- 7. The device is now initialized and ready for normal operation.

At power-down,  $V_{CCQ}$  must go LOW, either before, or simultaneously with,  $V_{CC}$  going LOW.



#### Figure 24: R/B# Power-On Behavior

Note: 1. Disregard  $V_{CCQ}$  for devices that use only  $V_{CC}$ .


# **Activating Interfaces**

After performing the steps under Device Initialization (page 36), the asynchronous interface is active for all targets on the device.

Each target's interface is independent of other targets, so the host is responsible for changing the interface for each target.

If the host and NAND Flash device, through error, are no longer using the same interface, then steps under Activating the Asynchronous Interface are performed to resynchronize the interfaces.

# Activating the Asynchronous Interface

To activate the asynchronous NAND interface, once the synchronous interface is active, the following steps are repeated for each target:

- 1. The host pulls CE# HIGH, disables its input to CLK, and enables its asynchronous interface.
- 2. The host pulls CE# LOW and issues the RESET (FFh) command, using an asynchronous command cycle.
- 3. R/B# goes LOW for <sup>t</sup>RST.
- 4. After <sup>T</sup>ITC, and during <sup>t</sup>RST, the device enters the asynchronous NAND interface. READ STATUS (70h) and READ STATUS ENHANCED (78h) are the only commands that can be issued.
- 5. After <sup>t</sup>RST, R/B# goes HIGH. Timing mode feature address (01h), subfeature parameter P1 is set to 00h, indicating that the asynchronous NAND interface is active and that the device is set to timing mode 0.

For further details, see Reset Operations.

# **Activating the Synchronous Interface**

To activate the synchronous NAND Flash interface, the following steps are repeated for each target:

- 1. Issue the SET FEATURES (EFh) command.
- 2. Write address 01h, which selects the timing mode.
- 3. Write P1 with 1Xh, where "X" is the timing mode used in the synchronous interface (see Configuration Operations).
- 4. Write P2–P4 as 00h-00h-00h.
- 5. R/B# goes LOW for <sup>t</sup>ITC. The host should pull CE# HIGH. During <sup>t</sup>ITC, the host should not issue any type of command, including status commands, to the NAND Flash device.
- 6. After <sup>t</sup>ITC, R/B# goes HIGH and the synchronous interface is enabled. Before pulling CE# LOW, the host should enable the clock.



## 16Gb, 32Gb Asynchronous/Synchronous NAND Activating Interfaces

### Figure 25: Activating the Synchronous Interface



Note: 1. TM = Timing mode.



# 16Gb, 32Gb Asynchronous/Synchronous NAND Command Definitions

# **Command Definitions**

## **Table 5: Command Set**

	Command	Number of Valid Address	Data	Command	Valid While Selected LUN	Valid While Other LUNs	
Command	Cycle #1	Cycles	Cycles	Cycle #2	is Busy <sup>1</sup>	are Busy <sup>2</sup>	Notes
Reset Operations	-		•				
RESET	FFh	0	-	-	Yes	Yes	
SYNCHRONOUS RESET	FCh	0	-	-	Yes	Yes	
RESET LUN	FAh	3	-	-	Yes	Yes	
Identification Operation	ns						
READ ID	90h	1	-	-			3
READ PARAMETER PAGE	ECh	1	-	-			
READ UNIQUE ID	EDh	1	-	-			
<b>Configuration Operatio</b>	ons						
GET FEATURES	EEh	1	-	-			3
SET FEATURES	EFh	1	4	-			4
Status Operations							
READ STATUS	70h	0	-	-	Yes		
READ STATUS ENHANCED	78h	3	-	-	Yes	Yes	
Column Address Operat	tions						
CHANGE READ COLUMN	05h	2	-	E0h		Yes	
CHANGE READ COLUMN ENHANCED	06h	5	_	E0h		Yes	
CHANGE WRITE COLUMN	85h	2	Optional	_		Yes	
CHANGE ROW ADDRESS	85h	5	Optional	_		Yes	5
Read Operations							
READ MODE	00h	0	_	-		Yes	
READ PAGE	00h	5	_	30h		Yes	6
READ PAGE MULTI- PLANE	00h	5	-	32h		Yes	
READ PAGE CACHE SEQUENTIAL	31h	0	-	-		Yes	7
READ PAGE CACHE RANDOM	00h	5	-	31h		Yes	6,7
READ PAGE CACHE LAST	3Fh	0	-	-		Yes	7
<b>Program Operations</b>							
PROGRAM PAGE	80h	5	Yes	10h		Yes	
PROGRAM PAGE MULTI-PLANE	80h	5	Yes	11h		Yes	
PROGRAM PAGE CACHE	80h	5	Yes	15h		Yes	8



## 16Gb, 32Gb Asynchronous/Synchronous NAND Command Definitions

#### Table 5: Command Set (Continued)

Command	Command Cycle #1	Number of Valid Address Cycles	Data Input Cycles	Command Cycle #2	Valid While Selected LUN is Busy <sup>1</sup>	Valid While Other LUNs are Busy <sup>2</sup>	Notes
Erase Operations							
ERASE BLOCK	60h	3	_	D0h		Yes	
ERASE BLOCK MULTI-PLANE	60h	3	-	D1h		Yes	
Copyback Operations							
COPYBACK READ	00h	5	-	35h		Yes	6
COPYBACK PROGRAM	85h	5	Optional	10h		Yes	
COPYBACK PROGRAM MULTI-PLANE	85h	5	Optional	11h		Yes	

Notes: 1. Busy means RDY = 0.

2. These commands can be used for interleaved die (multi-LUN) operations (see Interleaved Die (Multi-LUN) Operations (page 95)).

- 3. The READ ID (90h) and GET FEATURES (EEh) output identical data on rising and falling DQS edges.
- 4. The SET FEATURES (EFh) command requires data transition prior to the rising edge of CLK, with identical data for the rising and falling edges.
- 5. Command cycle #2 of 11h is conditional. See CHANGE ROW ADDRESS (85h) for more details.
- 6. This command can be preceded by up to one READ PAGE MULTI-PLANE (00h-32h) command to accommodate a maximum simultaneous two-plane array operation.
- Issuing a READ PAGE CACHE-series (31h, 00h-31h, 00h-32h, 3Fh) command when the array is busy (RDY = 1, ARDY = 0) is supported if the previous command was a READ PAGE (00h-30h) or READ PAGE CACHE-series command; otherwise, it is prohibited.
- Issuing a PROGRAM PAGE CACHE (80h-15h) command when the array is busy (RDY = 1, ARDY = 0) is supported if the previous command was a PROGRAM PAGE CACHE (80h-15h) command; otherwise, it is prohibited.



## 16Gb, 32Gb Asynchronous/Synchronous NAND Reset Operations

# **Reset Operations**

## **RESET (FFh)**

The RESET (FFh) command is used to put a target into a known condition and to abort command sequences in progress. This command is accepted by all die (LUNs), even when they are busy.

When FFh is written to the command register, the target goes busy for <sup>t</sup>RST. During <sup>t</sup>RST, the selected target (CE#) discontinues all array operations on all die (LUNs). All pending single- and multi-plane operations are cancelled. If this command is issued while a PROGRAM or ERASE operation is occurring on one or more die (LUNs), the data may be partially programmed or erased and is invalid. The command register is cleared and ready for the next command. The data register and cache register contents are invalid.

RESET must be issued as the first command to each target following power-up (see Device Initialization (page 36)). Use of the READ STATUS ENHANCED (78h) command is prohibited during the power-on RESET. To determine when the target is ready, use READ STATUS (70h).

If the RESET (FFh) command is issued when the synchronous interface is enabled, the target's interface is changed to the asynchronous interface and the timing mode is set to 0. The RESET (FFh) command can be issued asynchronously when the synchronous interface is active, meaning that CLK does not need to be continuously running when CE# is transitioned LOW and FFh is latched on the rising edge of CLK. After this command is latched, the host should not issue any commands during <sup>t</sup>ITC. After <sup>t</sup>ITC, and during or after <sup>t</sup>RST, the host can poll each LUN's status register.

If the RESET (FFh) command is issued when the asynchronous interface is active, the target's asynchronous timing mode remains unchanged. During or after <sup>t</sup>RST, the host can poll each LUN's status register.

#### Figure 26: RESET (FFh) Operation





## 16Gb, 32Gb Asynchronous/Synchronous NAND Reset Operations

# **SYNCHRONOUS RESET (FCh)**

When the synchronous interface is active, the SYNCHRONOUS RESET (FCh) command is used to put a target into a known condition and to abort command sequences in progress. This command is accepted by all die (LUNs), even when they are BUSY.

When FCh is written to the command register, the target goes busy for <sup>t</sup>RST. During <sup>t</sup>RST, the selected target (CE#) discontinues all array operations on all die (LUNs). All pending single- and multi-plane operations are cancelled. If this command is issued while a PROGRAM or ERASE operation is occurring on one or more die (LUNs), the data may be partially programmed or erased and is invalid. The command register is cleared and ready for the next command. The data register and cache register contents are invalid and the synchronous interface remains active.

During or after <sup>t</sup>RST, the host can poll each LUN's status register.

SYNCHRONOUS RESET is only accepted while the synchronous interface is active. Its use is prohibited when the asynchronous interface is active.

#### Figure 27: SYNCHRONOUS RESET (FCh) Operation





## 16Gb, 32Gb Asynchronous/Synchronous NAND Reset Operations

## **RESET LUN (FAh)**

The RESET LUN (FAh) command is used to put a particular LUN on a target into a known condition and to abort command sequences in progress. This command is accepted by only the LUN addressed by the RESET LUN (FAh) command, even when that LUN is busy.

When FAh is written to the command register, the addressed LUN goes busy for <sup>t</sup>RST. During <sup>t</sup>RST, the selected LUN discontinues all array operations. All pending singleand multi-plane operations are canceled. If this command is issued while a PROGRAM or ERASE operation is occurring on the addressed LUN, the data may be partially programmed or erased and is invalid. The command register is cleared and ready for the next command. The data register and cache register contents are invalid.

If the RESET LUN (FAh) command is issued when the synchronous interface is enabled, the targets's interface remains in synchronous mode.

If the RESET LUN (FAh) command is issued when the asynchronous interface is enabled, the target's interface remains in asynchronous mode.

During or after <sup>t</sup>RST, the host can poll each LUN's status register.

The RESET LUN (FAh) command is prohibited when not in the default array operation mode.

The RESET LUN (FAh) command can only be issued to a target (CE#) after the RESET (FFh) command has been issued as the first command to a target following power-up.

#### Figure 28: RESET LUN (FAh) Operation





# **Identification Operations**

## READ ID (90h)

The READ ID (90h) command is used to read identifier codes programmed into the target. This command is accepted by the target only when all die (LUNs) on the target are idle.

Writing 90h to the command register puts the target in read ID mode. The target stays in this mode until another valid command is issued.

When the 90h command is followed by a 00h address cycle, the target returns a 5-byte identifier code that includes the manufacturer ID, device configuration, and part-specific information.

When the 90h command is followed by a 20h address cycle, the target returns the 4-byte ONFI identifier code.

After the 90h and address cycle are written to the target, the host enables data output mode to read the identifier information. When the asynchronous interface is active, one data byte is output per RE# toggle. When the synchronous interface is active, one data byte is output per rising edge of DQS when ALE and CLE are HIGH; the data byte on the falling edge of DQS is identical to the data byte output on the previous rising edge of DQS.

#### Figure 29: READ ID (90h) with 00h Address Operation



Note: 1. See the READ ID Parameter tables for byte definitions.

## Figure 30: READ ID (90h) with 20h Address Operation



Note: 1. See the READ ID Parameter tables for byte definitions.



# **READ ID Parameter Tables**

#### **Table 6: Read ID Parameters for Address 00h**

Device	Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7
MT29F16G08CBACA	2Ch	48h	04h	4Ah	A5h	00h	00h	00h
MT29F32G08CFACA	2Ch	48h	04h	4Ah	A5h	00h	00h	00h
MT29F16G08CBACB	2Ch	48h	04h	4Ah	A5h	00h	00h	00h
MT29F32G08CFACB	2Ch	48h	04h	4Ah	A5h	00h	00h	00h

Note: 1. h = hexadecimal.

#### **Table 7: Read ID Parameters for Address 20h**

Device	Byte 0	Byte 1	Byte 2	Byte 3	Byte 4
All	4Fh	4Eh	46h	49h	XXh

Notes: 1. h = hexadecimal.

2. XXh = Undefined.



## **READ PARAMETER PAGE (ECh)**

The READ PARAMETER PAGE (ECh) command is used to read the ONFI parameter page programmed into the target. This command is accepted by the target only when all die (LUNs) on the target are idle.

Writing ECh to the command register puts the target in read parameter page mode. The target stays in this mode until another valid command is issued.

When the ECh command is followed by an 00h address cycle, the target goes busy for <sup>t</sup>R. If the READ STATUS (70h) command is used to monitor for command completion, the READ MODE (00h) command must be used to re-enable data output mode. Use of the READ STATUS ENHANCED (78h) command is prohibited while the target is busy and during data output.

After <sup>t</sup>R completes, the host enables data output mode to read the parameter page. When the asynchronous interface is active, one data byte is output per RE# toggle. When the synchronous interface is active, one data byte is output for each rising or falling edge of DQS.

A minimum of three copies of the parameter page are stored in the device. Each parameter page is 256 bytes. If desired, the CHANGE READ COLUMN (05h-E0h) command can be used to change the location of data output. Use of the CHANGE READ COLUMN ENHANCED (06h-E0h) command is prohibited.

The READ PARAMETER PAGE (ECh) output data can be used by the host to configure its internal settings to properly use the NAND Flash device. Parameter page data is static per part, however the value can be changed through the product cycle of NAND Flash. The host should interpret the data and configure itself accordingly.

## Figure 31: READ PARAMETER (ECh) Operation





#### Parameter Page Data Structure Tables

#### **Table 8: Parameter Page Data Structure**

Byte	Description	Device	Values
<b>Revision</b> in	nformation and features block		
0–3	Parameter page signature Byte 0: 4Fh, "O" Byte 1: 4Eh, "N" Byte 2: 46h, "F" Byte 3: 49h, "I"	_	4Fh, 4Eh, 46h, 49h
4–5	Revision number Bit[15:5]: Reserved (0) Bit 4: 1 = supports ONFI version 2.2 Bit 3: 1 = supports ONFI version 2.1 Bit 2: 1 = supports ONFI version 2.0 Bit 1: 1 = supports ONFI version 1.0 Bit 0: Reserved (0)	_	1Eh, 00h
6-7	Features supported	MT29F16G08CBACA	D8h, 01h
	Bit[15:9]: Reserved (0) Bit 8: 1 – supports program page register clear ophance	MT29F32G08CFACA	
	ment	MT29F16G08CBACB	F8h, 01h
	Bit 7: 1 = supports extended parameter page Bit 6: 1 = supports interleaved (multi-plane) read opera- tions Bit 5: 1 = supports synchronous interface Bit 4: 1 = supports odd-to-even page copyback Bit 3: 1 = supports interleaved (multi-plane) program and erase operations Bit 2: 1 = supports non-sequential page programming Bit 1: 1 = supports multiple LUN operations Bit 0: 1 = supports 16-bit data bus width	MT29F32G08CFACB	
8–9	Optional commands supported Bit[15:10]: Reserved (0) Bit 9: 1 = supports RESET LUN command Bit 8: 1 = supports small data move Bit 7: 1 = supports CHANGE ROW ADDRESS Bit 6: 1 = supports CHANGE READ COLUMN ENHANCED Bit 5: 1 = supports READ UNIQUE ID Bit 4: 1 = supports COPYBACK Bit 3: 1 = supports READ STATUS ENHANCED Bit 2: 1 = supports GET FEATURES and SET FEATURES Bit 1: 1 = supports read cache commands Bit 0: 1 = supports PROGRAM PAGE CACHE	_	FFh, 03h
10–11	Reserved (0)		All 00h
12–13	Extended parameter page length	_	03h, 00h
14	Number of parameter pages	-	03h
15–31	Reserved (0)	-	All 00h
Manufactu	Irer information block		



Byte	Description	Device	Values
32–43	Device manufacturer (12 ASCII characters)	-	4Dh, 49h, 43h, 52h,
	Micron		4Fh, 4Eh, 20h, 20h,
			20h, 20h, 20h, 20h
44–63	Device model (20 ASCII characters)	MT29F16G08CBACAWP	4Dh, 54h, 32h, 39h,
			401, 311, 301, 471, 30h 38h 43h 42h
			41h, 43h, 41h, 57h,
			50h, 20h, 20h, 20h
		MT29F16G08CBACAH5	4Dh, 54h, 32h, 39h,
			46h, 31h, 36h, 47h,
			30h, 38h, 43h, 42h,
			41h, 43h, 41h, 48h,
			35h, 20h, 20h, 20h
		MT29F32G08CFACAWP	4Dh, 54h, 32h, 39h,
			46n, 33n, 32n, 4/n, 30b 38b 43b 46b
			41h 43h 41h 57h
			50h, 20h, 20h, 20h
		MT29F16G08CBACBWP	4Dh, 54h, 32h, 39h,
			46h, 31h, 36h, 47h,
			30h, 38h, 43h, 42h,
			41h, 43h, 42h, 57h,
			50h, 20h, 20h, 20h
		MT29F32G08CFACBWP	4Dh, 54h, 32h, 39h,
			46h, 33h, 32h, 4/h,
			41h 43h 42h 57h
			50h, 20h, 20h, 20h
64	JEDEC manufacturer ID	_	2Ch
65–66	Date code	_	00h, 00h
67–79	Reserved (0)	-	All 00h
Memory o	rganization block		
80–83	Number of data bytes per page	-	00h, 10h, 00h, 00h
84–85	Number of spare bytes per page	_	E0h, 00h
86–91	Reserved (0)	_	All 00h
92–95	Number of pages per block		00h, 01h, 00h, 00h
96–99	Number of blocks per LUN	-	00h, 08h, 00h, 00h
100	Number of LUNs per chip enable	MT29F16G08CBACA	01h
		MT29F32G08CFACA	
		MT29F16G08CBACB	
		MT29F32G08CFACB	

Byte	Description	Device	Values
101	Number of address cycles	-	23h
	Bit[7:4]: Column address cycles		
	Bit[3:0]: Row address cycles		
102	Number of bits per cell	-	02h
103–104	Bad blocks maximum per LUN	-	32h, 00h
105–106	Block endurance	-	03h, 03h
107	Guaranteed valid blocks at beginning of target	-	01h
108–109	Block endurance for guaranteed valid blocks	-	00h, 00h
110	Number of programs per page	-	01h
111	Partial programming attributes Bit[7:5]: Reserved Bit 4: 1 = partial page layout is partial page data fol- lowed by partial page spare	_	00h
	Bit[3:1]: Reserved		
112	Bit 0: 1 = partial page programming has constraints		
112	Number of bits ECC correctability	-	FFN
113	Bit[7:4]: Reserved (0) Bit[3:0]: Number of interleaved address bits	-	UIN
114	Interleaved operation attributes Bit[7:5]: Reserved (0) Bit 4: 1 = supports read cache Bit 3: Address restrictions for cache operations Bit 2: 1 = supports program cache Bit 1: 1 = no block address restrictions Bit 0: Overlapped/concurrent interleaving support	_	1Eh
115–127	Reserved (0)	_	All 00h
Electrical	barameters block	1	
128	I/O pin capacitance per chip enable	MT29F16G08CBACAWP	05h
		MT29F16G08CBACAH5	05h
		MT29F32G08CFACAWP	04h
		MT29F16G08CBACBWP	05h
		MT29F32G08CFACBWP	04h
129–130	Asynchronous timing mode support	-	3Fh, 00h
	Bit[15:6]: Reserved (0) Bit 5: 1 = supports timing mode 5 Bit 4: 1 = supports timing mode 4 Bit 3: 1 = supports timing mode 3 Bit 2: 1 = supports timing mode 2 Bit 1: 1 = supports timing mode 1 Bit 0: 1 = supports timing mode 0, shall be 1		
131–132	Reserved (0)	_	All 00h
133–134	<sup>t</sup> PROG Maximum PROGRAM PAGE time (µs)	_	28h, 0Ah



Byte	Description	Device	Values
135–136	<sup>t</sup> BERS Maximum BLOCK ERASE time (µs)	-	10h, 27h
137–138	<sup>t</sup> R Maximum PAGE READ time (μs)	-	4Bh, 00h
139–140	<sup>t</sup> CCS Minimum change column setup time (ns)	-	C8h, 00h
141–142	Source synchronous timing mode support	MT29F16G08CBACAWP	00h, 00h
	Bit[15:6]: Reserved (0)	MT29F16G08CBACAH5	
	Bit 5: 1 = supports timing mode 5 Bit 4: 1 = supports timing mode 4	MT29F32G08CFACAWP	
	Bit 3: 1 = supports timing mode 3	MT29F16G08CBACBWP	1Fh, 00h
	Bit 2: 1 = supports timing mode 2	MT29F32G08CFACBWP	
	Bit 1: 1 = supports timing mode 1		
	Bit 0: 1 = supports timing mode 0		201
143	Source synchronous features Bit[7:3]: Received (0)	MT29F16G08CBACAWP	00h
	Bit 2: 1 = devices support CLK stopped for data input	MT29F16G08CBACAH5	
	Bit 1: 1 = typical capacitance values present	MT29F32G08CFACAWP	
	: 0: 0 = use <sup>t</sup> CAD MIN value	MT29F16G08CBACBWP	02h
		MT29F32G08CFACBWP	
144–145	CLK input pin capacitance, typical	MT29F16G08CBACAWP	00h, 00h
		MT29F16G08CBACAH5	
		MT29F32G08CFACAWP	
		MT29F16G08CBACBWP	34h, 00h
		MT29F32G08CFACBWP	27h, 00h
146–147	I/O pin capacitance, typical	MT29F16G08CBACAWP	00h, 00h
		MT29F16G08CBACAH5	
		MT29F32G08CFACAWP	
		MT29F16G08CBACBWP	23h, 00h
		MT29F32G08CFACBWP	20h, 00h
148–149	Input capacitance, typical	MT29F16G08CBACAWP	00h, 00h
		MT29F16G08CBACAH5	
		MT29F32G08CFACAWP	
		MT29F16G08CBACBWP	34h, 00h
		MT29F32G08CFACBWP	27h, 00h
150	Input pin capacitance, maximum	MT29F16G08CBACAWP	06h
		MT29F16G08CBACAH5	07h
		MT29F32G08CFACAWP	05h
		MT29F16G08CBACBWP	06h
		MT29F32G08CFACBWP	05h

Byte	Description	Device	Values
151	Driver strength support	-	07h
	Bit[7:3]: Reserved (0)		
	Bit 2: 1 = Supports Overdrive 2 drive strength		
	Bit 1: 1 = Supports Overdrive 1 drive strength		
	Bit 0: 1 = Supports driver strength settings		
152–153	<sup>t</sup> R maximum interleaved (multi-plane) page read time (µs)	_	4Bh, 00h
154-155	<sup>t</sup> ADL program register clear enhancement values (ns)	-	46h, 00h
156–163	Reserved (0)	_	All 00h
Vendor bl	pck		
164–165	Vendor-specific revision number	-	01h, 00h
166	TWO-PLANE PAGE READ support	-	01h
	Bit[7:1]: Reserved (0)		
	Bit 0: 1 = Support for TWO-PLANE PAGE READ		
167	Read cache support	-	00h
	Bit[7:1]: Reserved (0)		
	Bit 0: 0 = Does not support Micron-specific read cache		
	function		
168	READ UNIQUE ID support	-	00h
	Bit[/:1]: Reserved (0)		
	ID		
169	Programmable DO output impedance support		00b
105	Bit[7:1]: Reserved (0)	_	0011
	Bit 0: 0 = No support for programmable DQ output impe-		
	dance by B8h command		
170	Number of programmable DQ output impedance settings	-	04h
	Bit[7:3]: Reserved (0)		
	Bit [2:0] = Number of programmable DQ output impe-		
	dance settings		
171	Programmable DQ output impedance feature address	-	10h
	Bit[7:0] = Programmable DQ output impedance feature		
170	address		011
1/2	Programmable R/B# pull-down strength support Bit[7:1]: Beconved (0)	-	UIN
	Bit 0: $1 = $ Support programmable R/B# pull-down strength		
173	Programmable R/R# pull-down strength feature address		81h
175	Bit[7:0] = Feature address used with programmable R/B#	-	0111
	pull-down strength		
174	Number of programmable R/B# pull-down strength set-		04h
	tings		
	Bit[7:3]: Reserved (0)		
	Bit[2:0] = Number of programmable R/B# pull-down		
	strength settings		

Byte	Description	Device	Values
175	OTP mode support	-	02h
	Bit[7:2]: Reserved (0)		
	Bit 1: 1 = Supports Get/Set Features command set Bit 0: 0 = Does not support A5b/A0b/AFb OTP command		
	set		
176	OTP page start	_	02h
	Bit[7:0] = Page where OTP page space begins		
177	OTP DATA PROTECT address	-	01h
	Bit[7:0] = Page address to use when issuing OTP DATA		
178	Number of OTP pages		1Fb
170	Bit[15:5]: Reserved (0)	_	
	Bit[4:0] = Number of OTP pages		
179	OTP Feature Address	-	90h
180–252	Reserved (0)	_	All 00h
253	Parameter page revision	-	05h
254–255	Integrity CRC	MT29F16G08CBACAWP	94h, B4h
		MT29F16G08CBACAH5	79h, BDh
		MT29F32G08CFACAWP	B7h, 68h
		MT29F16G08CBACBWP	77h, 51h
		MT29F32G08CFACBWP	22h, D6h
Redundan	t parameter pages	1	1
256–511	Value of bytes 0–255	-	See bytes 0–255
512–767	Value of bytes 0–255	-	See bytes 0–255
Extended	parameter pages		
768–769	Extended parameter page Integrity CRC	-	EAh, 27h
770-773	Extended parameter page signature	-	45h, 50h, 50h, 53h
	Byte 0: 45h, "E" Byte 1: 50h, "P"		
	Byte 2: 50h, "P"		
	Byte 3: 53h, "S"		
774-783	Reserved (0)	-	All 00h
784	Section 0 type	-	02h
785	Section 0 length	_	01h
786-799	Reserved (0)	_	All 00h
800	Number of bits ECC correctability	-	18h
801	ECC codeword size	-	0Ah
802-803	Bad blocks maximum per LUN	-	32h, 00h
804-805	Block endurance	-	03h, 03h
806-815	Reserved (0)	-	All 00h
816-863	Value of bytes 768-815	_	See bytes 768-815



Byte	Description	Device	Values
864-911	Value of bytes 768-815	-	See bytes 768-815



# **READ UNIQUE ID (EDh)**

The READ UNIQUE ID (EDh) command is used to read a unique identifier programmed into the target. This command is accepted by the target only when all die (LUNs) on the target are idle.

Writing EDh to the command register puts the target in read unique ID mode. The target stays in this mode until another valid command is issued.

When the EDh command is followed by a 00h address cycle, the target goes busy for <sup>t</sup>R. If the READ STATUS (70h) command is used to monitor for command completion, the READ MODE (00h) command must be used to re-enable data output mode.

After <sup>t</sup>R completes, the host enables data output mode to read the unique ID. When the asynchronous interface is active, one data byte is output per RE# toggle. When the synchronous interface is active, two data bytes are output, one byte for each rising or falling edge of DQS.

Sixteen copies of the unique ID data are stored in the device. Each copy is 32 bytes. The first 16 bytes of a 32-byte copy are unique data, and the second 16 bytes are the complement of the first 16 bytes. The host should XOR the first 16 bytes with the second 16 bytes. If the result is 16 bytes of FFh, then that copy of the unique ID data is correct. In the event that a non-FFh result is returned, the host can repeat the XOR operation on a subsequent copy of the unique ID data. If desired, the CHANGE READ COLUMN (05h-E0h) command can be used to change the data output location. Use of the CHANGE READ COLUMN ENHANCED (06h-E0h) command is prohibited.

### Figure 32: READ UNIQUE ID (EDh) Operation





# **Configuration Operations**

The SET FEATURES (EFh) and GET FEATURES (EEh) commands are used to modify the target's default power-on behavior. These commands use a one-byte feature address to determine which subfeature parameters will be read or modified. Each feature address (in the 00h to FFh range) is defined in Table 9. The SET FEATURES (EFh) command writes subfeature parameters (P1-P4) to the specified feature address. The GET FEA-TURES command reads the subfeature parameters (P1-P4) at the specified feature address.

Unless otherwise specifed, the values of the feature addresses do not change when RE-SET (FFh, FCh) is issued by the host.

Feature Address	Definition
00h	Reserved
01h	Timing mode
02h–0Fh	Reserved
10h	Programmable output drive strength
11h–7Fh	Reserved
80h	Programmable output drive strength
81h	Programmable RB# pull-down strength
82h–8Fh	Reserved
90h	Array operation mode
91h–FFh	Reserved

#### **Table 9: Feature Address Definitions**

# **SET FEATURES (EFh)**

The SET FEATURES (EFh) command writes the subfeature parameters (P1-P4) to the specified feature address to enable or disable target-specific features. This command is accepted by the target only when all die (LUNs) on the target are idle.

Writing EFh to the command register puts the target in the set features mode. The target stays in this mode until another command is issued.

The EFh command is followed by a valid feature address as specified in Table 9. The host waits for <sup>t</sup>ADL before the subfeature parameters are input. When the asynchronous interface is active, one subfeature parameter is latched per rising edge of WE#. When the synchronous interface is active, one subfeature parameter is latched per rising edge of DQS. The data on the falling edge of DQS should be identical to the subfeature parameter input on the previous rising edge of DQS. The device is not required to wait for the repeated data byte before beginning internal actions.

After all four subfeature parameters are input, the target goes busy for <sup>t</sup>FEAT. The READ STATUS (70h) command can be used to monitor for command completion.

Feature address 01h (timing mode) operation is unique. If SET FEATURES is used to modify the interface type, the target will be busy for <sup>t</sup>ITC. See Activating Interfaces (page 37) for details.



#### Figure 33: SET FEATURES (EFh) Operation



## **GET FEATURES (EEh)**

The GET FEATURES (EEh) command reads the subfeature parameters (P1-P4) from the specified feature address. This command is accepted by the target only when all die (LUNs) on the target are idle.

Writing EEh to the command register puts the target in get features mode. The target stays in this mode until another valid command is issued.

When the EEh command is followed by a feature address, the target goes busy for <sup>t</sup>FEAT. If the READ STATUS (70h) command is used to monitor for command completion, the READ MODE (00h) command must be used to re-enable data output mode. During and prior to data output, use of the READ STATUS ENHANCED (78h) command is prohibited.

After <sup>t</sup>FEAT completes, the host enables data output mode to read the subfeature parameters. When the asynchronous interface is active, one data byte is output per RE# toggle. When the synchronous interface is active, one subfeature parameter is output per DQS toggle on rising or falling edge of DQS.

#### Figure 34: GET FEATURES (EEh) Operation





### Table 10: Feature Address 01h: Timing Mode

Subfeature											
Parameter	Options	DQ7	DQ6	DQ5	DQ4	DQ3	DQ2	DQ1	DQ0	Value	Notes
P1											
Timing mode	Mode 0 (default)					0	0	0	0	x0h	1, 2
	Mode 1					0	0	0	1	x1h	
	Mode 2					0	0	1	0	x2h	
	Mode 3					0	0	1	1	x3h	
	Mode 4					0	1	0	0	x4h	
	Mode 5					0	1	0	1	x5h	
Data interface	Asynchronous (default)			0	0					0xh	1
	Synchronous DDR			0	1					1xh	
	Reserved			1	x					2xh	
Program clear	Program com- mand clears all cache registers on a target (default)		0							0b	
	Program com- mand clears only addressed LUN cache register on a target		1							1b	
Reserved		0								0b	
P2	·			1	1						
Reserved		0	0	0	0	0	0	0	0	00h	
P3			•								
Reserved	Reserved		0	0	0	0	0	0	0	00h	
P4								•	•		
Reserved		0	0	0	0	0	0	0	0	00h	

Notes: 1. Asynchronous timing mode 0 is the default, power-on value.

2. If the synchronous interface is active, a RESET (FFh) command will change the timing mode and data interface bits of feature address 01h to their default values. If the asynchronous interface is active, a RESET (FFh) command will not change the values of the timing mode or data interface bits to their default valued.



Subfeature Pa-											
rameter	Options	DQ7	DQ6	DQ5	DQ4	DQ3	DQ2	DQ1	DQ0	Value	Notes
P1											
Output drive	Overdrive 2							0	0	00h	1
strength	Overdrive 1							0	1	01h	
	Nominal (de- fault)							1	0	02h	
	Underdrive							1	1	03h	
Reserved		0	0	0	0	0	0			00h	
P2		·									
Reserved		0	0	0	0	0	0	0	0	00h	
Р3		·									
Reserved		0	0	0	0	0	0	0	0	00h	
P4		·									
Reserved		0	0	0	0	0	0	0	0	00h	

#### Table 11: Feature Addresses 10h and 80h: Programmable Output Drive Strength

Note: 1. See Output Drive Strength Impedance Values ( $V_{CCQ} = 2.7-3.6V$ ) table for details.

#### Table 12: Feature Addresses 81h: Programmable R/B# Pull-Down Strength

Subfeature Pa- rameter	Options	DQ7	DQ6	DQ5	DQ4	DQ3	DQ2	DQ1	DQ0	Value	Notes
P1											
R/B# pull-down	Full (default)							0	0	00h	1
strength	Three-quarter							0	1	01h	
	One-half							1	0	02h	
	One-quarter							1	1	03h	
Reserved		0	0	0	0	0	0			00h	
P2					T			1			•
Reserved		0	0	0	0	0	0	0	0	00h	
P3							•				
Reserved		0	0	0	0	0	0	0	0	00h	
P4											
Reserved		0	0	0	0	0	0	0	0	00h	

Note: 1. This feature address is used to change the default R/B# pull-down strength. Its strength should be selected based on the expected loading of R/B#. Full strength is the default, power-on value.



### Table 13: Feature Addresses 90h: Array Operation Mode

Subfeature Pa-	Ontions	DOZ	DOG	DOF	D04	D03	D02	D01	DOU	Value	Notos
D1	options	DQ	DQ0	DQ3	DQ4	DQ3	DQZ	DQI	DQU	value	Notes
F I	1	1				1				r	
Array Operation Mode	Normal (de- fault)								0	00h	
	OTP Block								1	01h	1
Reserved		0	0	0	0	0	0	0		00h	
P2		·									
Reserved		0	0	0	0	0	0	0	0	00h	
Р3			•				•				
Reserved		0	0	0	0	0	0	0	0	00h	
P4			•		1	•	•		<u>.</u>		
Reserved		0	0	0	0	0	0	0	0	00h	

Notes: 1. See One-Time Programmable (OTP) Operations for details.

2. A RESET (FFh) command will cause the bits of the array operation mode to change to their default values.



# **Status Operations**

Each die (LUN) provides its status independently of other die (LUNs) on the same target through its 8-bit status register.

After the READ STATUS (70h) or READ STATUS ENHANCED (78h) command is issued, status register output is enabled. The contents of the status register are returned on DQ[7:0] for each data output request.

When the asynchronous interface is active and status register output is enabled, changes in the status register are seen on DQ[7:0] as long as CE# and RE# are LOW; it is not necessary to toggle RE# to see the status register update.

When the synchronous interface is active and status register output is enabled, changes in the status register are seen on DQ[7:0] as long as CE# and W/R# are LOW and ALE and CLE are HIGH. DQS also toggles while ALE and CLE are HIGH.

While monitoring the status register to determine when a data transfer from the Flash array to the data register (<sup>t</sup>R) is complete, the host must issue the READ MODE (00h) command to disable the status register and enable data output (see READ MODE (00h) (page 70)).

The READ STATUS (70h) command returns the status of the most recently selected die (LUN). To prevent data contention during or following an interleaved die (multi-LUN) operation, the host must enable only one die (LUN) for status output by using the READ STATUS ENHANCED (78h) command (see Interleaved Die (Multi-LUN) Operations (page 95)).

#### **Table 14: Status Register Definition**

SR Bit	Definition	Independent per Plane <sup>1</sup>	Description
7	WP#	_	Write Protect: 0 = Protected 1 = Not protected In the normal array mode, this bit indicates the value of the WP# signal. In OTP mode this bit is set to 0 if a PROGRAM OTP PAGE operation is attemp- ted and the OTP area is protected.
6	RDY	_	Ready/Busy I/O: 0 = Busy 1 = Ready This bit indicates that the selected die (LUN) is not available to accept new commands, address, or data I/O cycles with the exception of RESET (FFh), SYNCHRONOUS RESET (FCh), READ STATUS (70h), and READ STATUS EN- HANCED (78h). This bit applies only to the selected die (LUN).
5	ARDY	_	Ready/Busy Array: 0 = Busy 1 = Ready This bit goes LOW (busy) when an array operation is occurring on any plane of the selected die (LUN). It goes HIGH when all array operations on the selected die (LUN) finish. This bit applies only to the selected die (LUN).
4	_	_	Reserved (0)
3	_	_	Reserved (0)



## 16Gb, 32Gb Asynchronous/Synchronous NAND Status Operations

### Table 14: Status Register Definition (Continued)

SR Bit	Definition	Independent per Plane <sup>1</sup>	Description
2	_	_	Reserved (0)
1	FAILC	Yes	Pass/Fail (N–1): 0 = Pass 1 = Fail This bit is set if the previous operation on the selected die (LUN) failed. This bit is valid only when RDY (SR bit 6) is 1. It applies to PROGRAM-, and COPY- BACK PROGRAM-series operations (80h-10h, 80h-15h, 85h-10h). This bit is not valid following an ERASE-series or READ-series operation.
0	FAIL	Yes	Pass/Fail (N): 0 = Pass 1 = Fail This bit is set if the most recently finished operation on the selected die (LUN) failed. This bit is valid only when ARDY (SR bit 5) is 1. It applies to PROGRAM-, ERASE-, and COPYBACK PROGRAM-series operations (80h-10h, 80h-15h, 60h-D0h, 85h-10h). This bit is not valid following a READ-series operation.

Note: 1. After a multi-plane operation begins, the FAILC and FAIL bits are ORed together for the active planes when the READ STATUS (70h) command is issued. After the READ STATUS ENHANCED (78h) command is issued, the FAILC and FAIL bits reflect the status of the plane selected.

## **READ STATUS (70h)**

The READ STATUS (70h) command returns the status of the last-selected die (LUN) on a target. This command is accepted by the last-selected die (LUN) even when it is busy (RDY = 0).

If there is only one die (LUN) per target, the READ STATUS (70h) command can be used to return status following any NAND command.

In devices that have more than one die (LUN) per target, during and following interleaved die (multi-LUN) operations, the READ STATUS ENHANCED (78h) command must be used to select the die (LUN) that should report status. In this situation, using the READ STATUS (70h) command will result in bus contention, as two or more die (LUNs) could respond until the next operation is issued. The READ STATUS (70h) command can be used following all single die (LUN) operations.

If following a multi-plane operation, regardless of the number of LUNs per target, the READ STATUS (70h) command indicates an error occurred (FAIL = 1), use the READ STATUS ENHANCED (78h) command—once for each plane—to determine which plane operation failed.



#### Figure 35: READ STATUS (70h) Operation



## **READ STATUS ENHANCED (78h)**

The READ STATUS ENHANCED (78h) command returns the status of the addressed die (LUN) on a target even when it is busy (RDY = 0). This command is accepted by all die (LUNs), even when they are BUSY (RDY = 0).

Writing 78h to the command register, followed by three row address cycles containing the page, block, and LUN addresses, puts the selected die (LUN) into read status mode. The selected die (LUN) stays in this mode until another valid command is issued. Die (LUNs) that are not addressed are deselected to avoid bus contention.

The selected LUN's status is returned when the host requests data output. The RDY and ARDY bits of the status register are shared for all of the planes of the selected die (LUN). The FAILC and FAIL bits are specific to the plane specified in the row address.

The READ STATUS ENHANCED (78h) command also enables the selected die (LUN) for data output. To begin data output following a READ-series operation after the selected die (LUN) is ready (RDY = 1), issue the READ MODE (00h) command, then begin data output. If the host needs to change the cache register that will output data, use the CHANGE READ COLUMN ENHANCED (06h-E0h) command after the die (LUN) is ready (see CHANGE READ COLUMN ENHANCED (06h-E0h)).

Use of the READ STATUS ENHANCED (78h) command is prohibited during the poweron RESET (FFh) command and when OTP mode is enabled. It is also prohibited following some of the other reset, identification, and configuration operations. See individual operations for specific details.

#### Figure 36: READ STATUS ENHANCED (78h) Operation





# **Column Address Operations**

The column address operations affect how data is input to and output from the cache registers within the selected die (LUNs). These features provide host flexibility for managing data, especially when the host internal buffer is smaller than the number of data bytes or words in the cache register.

When the asynchronous interface is active, column address operations can address any byte in the selected cache register.

When the synchronous interface is active, column address operations are aligned to word boundaries (CA0 is forced to 0), because as data is transferred on DQ[7:0] in twobyte units.

## **CHANGE READ COLUMN (05h-E0h)**

The CHANGE READ COLUMN (05h-E0h) command changes the column address of the selected cache register and enables data output from the last selected die (LUN). This command is accepted by the selected die (LUN) when it is ready (RDY = 1; ARDY = 1). It is also accepted by the selected die (LUN) during CACHE READ operations (RDY = 1; ARDY = 0).

Writing 05h to the command register, followed by two column address cycles containing the column address, followed by the E0h command, puts the selected die (LUN) into data output mode. After the E0h command cycle is issued, the host must wait at least <sup>t</sup>CCS before requesting data output. The selected die (LUN) stays in data output mode until another valid command is issued.

In devices with more than one die (LUN) per target, during and following interleaved die (multi-LUN) operations, the READ STATUS ENHANCED (78h) command must be issued prior to issuing the CHANGE READ COLUMN (05h-E0h). In this situation, using the CHANGE READ COLUMN (05h-E0h) command without the READ STATUS EN-HANCED (78h) command will result in bus contention, as two or more die (LUNs) could output data.

#### Figure 37: CHANGE READ COLUMN (05h-E0h) Operation





## 16Gb, 32Gb Asynchronous/Synchronous NAND Column Address Operations

# CHANGE READ COLUMN ENHANCED (06h-E0h)

The CHANGE READ COLUMN ENHANCED (06h-E0h) command enables data output on the addressed die's (LUN's) cache register at the specified column address. This command is accepted by a die (LUN) when it is ready (RDY = 1; ARDY = 1).

Writing 06h to the command register, followed by two column address cycles and three row address cycles, followed by E0h, enables data output mode on the address LUN's cache register at the specified column address. After the E0h command cycle is issued, the host must wait at least <sup>t</sup>CCS before requesting data output. The selected die (LUN) stays in data output mode until another valid command is issued.

Following a multi-plane read page operation, the CHANGE READ COLUMN EN-HANCED (06h-E0h) command is used to select the cache register to be enabled for data output. After data output is complete on the selected plane, the command can be issued again to begin data output on another plane.

In devices with more than one die (LUN) per target, after all of the die (LUNs) on the target are ready (RDY = 1), the CHANGE READ COLUMN ENHANCED (06h-E0h) command can be used following an interleaved die (multi-LUN) read operation. Die (LUNs) that are not addressed are deselected to avoid bus contention.

In devices with more than one die (LUN) per target, during interleaved die (multi-LUN) operations where more than one or more die (LUNs) are busy (RDY = 1; ARDY = 0 or RDY = 0; ARDY = 0), the READ STATUS ENHANCED (78h) command must be issued to the die (LUN) to be selected prior to issuing the CHANGE READ COLUMN ENHANCED (06h-E0h). In this situation, using the CHANGE READ COLUMN ENHANCED (06h-E0h) command without the READ STATUS ENHANCED (78h) command will result in bus contention, as two or more die (LUNs) could output data.

If there is a need to update the column address without selecting a new cache register or LUN, the CHANGE READ COLUMN (05h-E0h) command can be used instead.

## Figure 38: CHANGE READ COLUMN ENHANCED (06h-E0h) Operation





## 16Gb, 32Gb Asynchronous/Synchronous NAND Column Address Operations

# **CHANGE WRITE COLUMN (85h)**

The CHANGE WRITE COLUMN (85h) command changes the column address of the selected cache register and enables data input on the last-selected die (LUN). This command is accepted by the selected die (LUN) when it is ready (RDY = 1; ARDY = 1). It is also accepted by the selected die (LUN) during cache program operations (RDY = 1; ARDY = 0).

Writing 85h to the command register, followed by two column address cycles containing the column address, puts the selected die (LUN) into data input mode. After the second address cycle is issued, the host must wait at least <sup>t</sup>CCS before inputting data. The selected die (LUN) stays in data input mode until another valid command is issued. Though data input mode is enabled, data input from the host is optional. Data input begins at the column address specified.

The CHANGE WRITE COLUMN (85h) command is allowed after the required address cycles are specified, but prior to the final command cycle (10h, 11h, 15h) of the following commands while data input is permitted: PROGRAM PAGE (80h-10h), PROGRAM PAGE MULTI-PLANE (80h-11h), PROGRAM PAGE CACHE (80h-15h), COPYBACK PRO-GRAM (85h-10h), and COPYBACK PROGRAM MULTI-PLANE (85h-11h).

In devices that have more than one die (LUN) per target, the CHANGE WRITE COL-UMN (85h) command can be used with other commands that support interleaved die (multi-LUN) operations.

#### Figure 39: CHANGE WRITE COLUMN (85h) Operation





## 16Gb, 32Gb Asynchronous/Synchronous NAND Column Address Operations

## **CHANGE ROW ADDRESS (85h)**

The CHANGE ROW ADDRESS (85h) command changes the row address (block and page) where the cache register contents will be programmed in the NAND Flash array. It also changes the column address of the selected cache register and enables data input on the specified die (LUN). This command is accepted by the selected die (LUN) when it is ready (RDY = 1; ARDY = 1). It is also accepted by the selected die (LUN) during cache programming operations (RDY = 1; ARDY = 0).

Write 85h to the command register. Then write two column address cycles and three row address cycles. This updates the page and block destination of the selected plane for the addressed LUN and puts the cache register into data input mode. After the fifth address cycle is issued the host must wait at least <sup>t</sup>CCS before inputting data. The selected LUN stays in data input mode until another valid command is issued. Though data input mode is enabled, data input from the host is optional. Data input begins at the column address specified.

The CHANGE ROW ADDRESS (85h) command is allowed after the required address cycles are specified, but prior to the final command cycle (10h, 11h, 15h) of the following commands while data input is permitted: PROGRAM PAGE (80h-10h), PROGRAM PAGE MULTI-PLANE (80h-11h), PROGRAM PAGE CACHE (80h-15h), COPYBACK PROGRAM (85h-10h), and COPYBACK PROGRAM MULTI-PLANE (85h-11h). When used with these commands, the LUN address and plane select bits are required to be identical to the LUN address and plane select bits originally specified.

The CHANGE ROW ADDRESS (85h) command enables the host to modify the original page and block address for the data in the cache register to a new page and block address.

In devices that have more than one die (LUN) per target, the CHANGE ROW ADDRESS (85h) command can be used with other commands that support interleaved die (multi-LUN) operations.

The CHANGE ROW ADDRESS (85h) command can be used with the CHANGE READ COLUMN (05h-E0h) or CHANGE READ COLUMN ENHANCED (06h-E0h) commands to read and modify cache register contents in small sections prior to programming cache register contents to the NAND Flash array. This capability can reduce the amount of buffer memory used in the host controller.

To modify the cache register contents in small sections, first issue a PAGE READ (00h-30h) or COPYBACK READ (00h-35h) operation. When data output is enabled, the host can output a portion of the cache register contents. To modify the cache register contents, issue the 85h command, the column and row addresses, and input the new data. The host can re-enable data output by issuing the 11h command, waiting <sup>1</sup>DBSY, and then issuing the CHANGE READ COLUMN (05h-E0h) or CHANGE READ COLUMN ENHANCED (06h-E0h) command. It is possible toggle between data output and data input multiple times. After the final CHANGE ROW ADDRESS (85h) operation is complete, issue the 10h command to program the cache register to the NAND Flash array.



#### Figure 40: CHANGE ROW ADDRESS (85h) Operation





# **Read Operations**

Read operations are used to copy data from the NAND Flash array of one or more of the planes to their respective cache registers and to enable data output from the cache registers to the host through the DQ bus.

#### **Read Operations**

The READ PAGE (00h-30h) command, when issued by itself, reads one page from the NAND Flash array to its cache register and enables data output for that cache register.

During data output the following commands can be used to read and modify the data in the cache registers: CHANGE READ COLUMN (05h-E0h) and CHANGE ROW AD-DRESS (85h).

#### **Read Cache Operations**

To increase data throughput, the READ PAGE CACHE-series (31h, 00h-31h) commands can be used to output data from the cache register while concurrently copying a page from the NAND Flash array to the data register.

To begin a read page cache sequence, begin by reading a page from the NAND Flash array to its corresponding cache register using the READ PAGE (00h-30h) command. R/B# goes LOW during <sup>t</sup>R and the selected die (LUN) is busy (RDY = 0, ARDY = 0). After <sup>t</sup>R (R/B# is HIGH and RDY = 1, ARDY = 1), issue either of these commands:

- READ PAGE CACHE SEQUENTIAL (31h)—copies the next sequential page from the NAND Flash array to the data register
- READ PAGE CACHE RANDOM (00h-31h)—copies the page specified in this command from the NAND Flash array (any plane) to its corresponding data register

After the READ PAGE CACHE-series (31h, 00h-31h) command has been issued, R/B# goes LOW on the target, and RDY = 0 and ARDY = 0 on the die (LUN) for <sup>t</sup>RCBSY while the next page begins copying data from the array to the data register. After <sup>t</sup>RCBSY, R/B# goes HIGH and the die's (LUN's) status register bits indicate the device is busy with a cache operation (RDY = 1, ARDY = 0). The cache register becomes available and the page requested in the READ PAGE CACHE operation is transferred to the data register. At this point, data can be output from the cache register, beginning at column address 0. The CHANGE READ COLUMN (05h-E0h) command can be used to change the column address of the data output by the die (LUN).

After outputting the desired number of bytes from the cache register, either an additional READ PAGE CACHE-series (31h, 00h-31h) operation can be started or the READ PAGE CACHE LAST (3Fh) command can be issued.

If the READ PAGE CACHE LAST (3Fh) command is issued, R/B# goes LOW on the target, and RDY = 0 and ARDY = 0 on the die (LUN) for <sup>t</sup>RCBSY while the data register is copied into the cache register. After <sup>t</sup>RCBSY, R/B# goes HIGH and RDY = 1 and ARDY = 1, indicating that the cache register is available and that the die (LUN) is ready. Data can then be output from the cache register, beginning at column address 0. The CHANGE READ COLUMN (05h-E0h) command can be used to change the column address of the data being output.

For READ PAGE CACHE-series (31h, 00h-31h, 3Fh), during the die (LUN) busy time, <sup>t</sup>RCBSY, when RDY = 0 and ARDY = 0, the only valid commands are status operations (70h, 78h) and RESET (FFh, FCh). When RDY = 1 and ARDY = 0, the only valid commands during READ PAGE CACHE-series (31h, 00h-31h) operations are status opera-



## 16Gb, 32Gb Asynchronous/Synchronous NAND Read Operations

tions (70h, 78h), READ MODE (00h), READ PAGE CACHE-series (31h, 00h-31h), CHANGE READ COLUMN (05h-E0h), and RESET (FFh, FCh).

#### Multi-Plane Read Operations

Multi-plane read page operations improve data throughput by copying data from more than one plane simultaneously to the specified cache registers. This is done by prepending one or more READ PAGE MULTI-PLANE (00h-32h) commands in front of the READ PAGE (00h-30h) command.

When the die (LUN) is ready, the CHANGE READ COLUMN ENHANCED (06h-E0h) command determines which plane outputs data. During data output, the following commands can be used to read and modify the data in the cache registers: CHANGE READ COLUMN (05h-E0h) and CHANGE ROW ADDRESS (85h). See Multi-Plane Operations for details.

#### **Multi-Plane Read Cache Operations**

Multi-plane read cache operations can be used to output data from more than one cache register while concurrently copying one or more pages from the NAND Flash array to the data register. This is done by prepending READ PAGE MULTI-PLANE (00h-32h) commands in front of the PAGE READ CACHE RANDOM (00h-31h) command.

To begin a multi-plane read page cache sequence, begin by issuing a MULTI-PLANE READ PAGE operation using the READ PAGE MULTI-PLANE (00h-32h) and READ PAGE (00h-30h) commands. R/B# goes LOW during <sup>t</sup>R and the selected die (LUN) is busy (RDY = 0, ARDY = 0). After <sup>t</sup>R (R/B# is HIGH and RDY = 1, ARDY = 1), issue either of these commands:

- READ PAGE CACHE SEQUENTIAL (31h)—copies the next sequential page from the previously addressed planes from the NAND Flash array to the data registers.
- READ PAGE MULTI-PLANE (00h-32h) commands, if desired, followed by the READ PAGE CACHE RANDOM (00h-31h) command—copies the pages specified from the NAND Flash array to the corresponding data registers.

After the READ PAGE CACHE-series (31h, 00h-31h) command has been issued, R/B# goes LOW on the target, and RDY = 0 and ARDY = 0 on the die (LUN) for <sup>t</sup>RCBSY while the next pages begin copying data from the array to the data registers. After <sup>t</sup>RCBSY, R/B# goes HIGH and the LUN's status register bits indicate the device is busy with a cache operation (RDY = 1, ARDY = 0). The cache registers become available and the pages requested in the READ PAGE CACHE operation are transferred to the data registers. Issue the CHANGE READ COLUMN ENHANCED (06h-E0h) command to determine which cache register will output data. After data is output, the CHANGE READ COL-UMN ENHANCED (06h-E0h) command can be used to output data from other cache registers. After a cache register has been selected, the CHANGE READ COLUMN (05h-E0h) command can be used to change the column address of the data output.

After outputting data from the cache registers, either an additional MULTI-PLANE READ CACHE-series (31h, 00h-31h) operation can be started or the READ PAGE CACHE LAST (3Fh) command can be issued.

If the READ PAGE CACHE LAST (3Fh) command is issued, R/B# goes LOW on the target, and RDY = 0 and ARDY = 0 on the die (LUN) for <sup>t</sup>RCBSY while the data registers are copied into the cache registers. After <sup>t</sup>RCBSY, R/B# goes HIGH and RDY = 1 and ARDY = 1, indicating that the cache registers are available and that the die (LUN) is ready. Issue the CHANGE READ COLUMN ENHANCED (06h-E0h) command to determine which



### 16Gb, 32Gb Asynchronous/Synchronous NAND Read Operations

cache register will output data. After data is output, the CHANGE READ COLUMN EN-HANCED (06h-E0h) command can be used to output data from other cache registers. After a cache register has been selected, the CHANGE READ COLUMN (05h-E0h) command can be used to change the column address of the data output.

For READ PAGE CACHE-series (31h, 00h-31h, 3Fh), during the die (LUN) busy time, <sup>t</sup>RCBSY, when RDY = 0 and ARDY = 0, the only valid commands are status operations (70h, 78h) and RESET (FFh, FCh). When RDY = 1 and ARDY = 0, the only valid commands during READ PAGE CACHE-series (31h, 00h-31h) operations are status operations (70h, 78h), READ MODE (00h), multi-plane read cache-series (31h, 00h-32h, 00h-31h), CHANGE READ COLUMN (05h-E0h, 06h-E0h), and RESET (FFh, FCh).

See Multi-Plane Operations for additional multi-plane addressing requirements.

## **READ MODE (00h)**

The READ MODE (00h) command disables status output and enables data output for the last-selected die (LUN) and cache register after a READ operation (00h-30h, 00h-35h) has been monitored with a status operation (70h, 78h). This command is accepted by the die (LUN) when it is ready (RDY = 1, ARDY = 1). It is also accepted by the die (LUN) during READ PAGE CACHE (31h, 3Fh, 00h-31h) operations (RDY = 1 and ARDY = 0).

In devices that have more than one die (LUN) per target, during and following interleaved die (multi-LUN) operations, the READ STATUS ENHANCED (78h) command must be used to select only one die (LUN) prior to issuing the READ MODE (00h) command. This prevents bus contention.



## READ PAGE (00h-30h)

The READ PAGE (00h–30h) command copies a page from the NAND Flash array to its respective cache register and enables data output. This command is accepted by the die (LUN) when it is ready (RDY = 1, ARDY = 1).

To read a page from the NAND Flash array, write the 00h command to the command register, the write five address cycles to the address registers, and conclude with the 30h command. The selected die (LUN) will go busy (RDY = 0, ARDY = 0) for <sup>t</sup>R as data is transferred.

To determine the progress of the data transfer, the host can monitor the target's R/B# signal or, alternatively, the status operations (70h, 78h) can be used. If the status operations are used to monitor the LUN's status, when the die (LUN) is ready (RDY = 1, ARDY = 1), the host disables status output and enables data output by issuing the READ MODE (00h) command. When the host requests data output, output begins at the column address specified.

During data output the CHANGE READ COLUMN (05h-E0h) command can be issued.

In devices that have more than one die (LUN) per target, during and following interleaved die (multi-LUN) operations the READ STATUS ENHANCED (78h) command must be used to select only one die (LUN) prior to the issue of the READ MODE (00h) command. This prevents bus contention.

The READ PAGE (00h-30h) command is used as the final command of a multi-plane read operation. It is preceded by one or more READ PAGE MULTI-PLANE (00h-32h) commands. Data is transferred from the NAND Flash array for all of the addressed planes to their respective cache registers. When the die (LUN) is ready (RDY = 1, ARDY = 1), data output is enabled for the cache register linked to the plane addressed in the READ PAGE (00h-30h) command. When the host requests data output, output begins at the column address last specified in the READ PAGE (00h-30h) command. The CHANGE READ COLUMN ENHANCED (06h-E0h) command is used to enable data output in the other cache registers. See Multi-Plane Operations for additional multi-plane addressing requirements.

## Figure 41: READ PAGE (00h-30h) Operation





# **READ PAGE CACHE SEQUENTIAL (31h)**

The READ PAGE CACHE SEQUENTIAL (31h) command reads the next sequential page within a block into the data register while the previous page is output from the cache register. This command is accepted by the die (LUN) when it is ready (RDY = 1, ARDY = 1). It is also accepted by the die (LUN) during READ PAGE CACHE (31h, 00h-31h) operations (RDY = 1 and ARDY = 0).

To issue this command, write 31h to the command register. After this command is issued, R/B# goes LOW and the die (LUN) is busy (RDY = 0, ARDY = 0) for <sup>t</sup>RCBSY. After <sup>t</sup>RCBSY, R/B# goes HIGH and the die (LUN) is busy with a cache operation (RDY = 1, ARDY = 0), indicating that the cache register is available and that the specified page is copying from the NAND Flash array to the data register. At this point, data can be output from the cache register beginning at column address 0. The CHANGE READ COLUMN (05h-E0h) command can be used to change the column address of the data being output from the cache register.

The READ PAGE CACHE SEQUENTIAL (31h) command can be used to cross block boundaries. If the READ PAGE CACHE SEQUENTIAL (31h) command is issued after the last page of a block is read into the data register, the next page read will be the next logical block in the plane which the 31h command was issued. Do not issue the READ PAGE CACHE SEQUENTIAL (31h) to cross die (LUN) boundaries. Instead, issue the READ PAGE CACHE LAST (3Fh) command.

If the READ PAGE CACHE SEQUENTIAL (31h) command is issued after a MULTI-PLANE READ PAGE operation (00h-32h, 00h-30h), the next sequential pages are read into the data registers while the previous pages can be output from the cache registers. After the die (LUN) is ready (RDY = 1, ARDY = 0), the CHANGE READ COLUMN EN-HANCED (06h-E0h) command is used to select which cache register outputs data.

## Figure 42: READ PAGE CACHE SEQUENTIAL (31h) Operation




# **READ PAGE CACHE RANDOM (00h-31h)**

The READ PAGE CACHE RANDOM (00h-31h) command reads the specified block and page into the data register while the previous page is output from the cache register. This command is accepted by the die (LUN) when it is ready (RDY = 1, ARDY = 1). It is also accepted by the die (LUN) during READ PAGE CACHE (31h, 00h-31h) operations (RDY = 1 and ARDY = 0).

To issue this command, write 00h to the command register, then write five address cycles to the address register, and conclude by writing 31h to the command register. The column address in the address specified is ignored. The die (LUN) address must match the same die (LUN) address as the previous READ PAGE (00h-30h) command or, if applicable, the previous READ PAGE CACHE RANDOM (00h-31h) command. There is no restriction on the plane address.

After this command is issued, R/B# goes LOW and the die (LUN) is busy (RDY = 0, ARDY = 0) for <sup>t</sup>RCBSY. After <sup>t</sup>RCBSY, R/B# goes HIGH and the die (LUN) is busy with a cache operation (RDY = 1, ARDY = 0), indicating that the cache register is available and that the specified page is copying from the NAND Flash array to the data register. At this point, data can be output from the cache register beginning at column address 0. The CHANGE READ COLUMN (05h-E0h) command can be used to change the column address of the data being output from the cache register.

In devices that have more than one die (LUN) per target, during and following interleaved die (multi-LUN) operations the READ STATUS ENHANCED (78h) command followed by the READ MODE (00h) command must be used to select only one die (LUN) and prevent bus contention.

If a MULTI-PLANE CACHE RANDOM (00h-32h, 00h-31h) command is issued after a MULTI-PLANE READ PAGE operation (00h-32h, 00h-30h), then the addressed pages are read into the data registers while the previous pages can be output from the cache registers. After the die (LUN) is ready (RDY = 1, ARDY = 0), the CHANGE READ COL-UMN ENHANCED (06h-E0h) command is used to select which cache register outputs data.



## Figure 43: READ PAGE CACHE RANDOM (00h-31h) Operation





# **READ PAGE CACHE LAST (3Fh)**

The READ PAGE CACHE LAST (3Fh) command ends the read page cache sequence and copies a page from the data register to the cache register. This command is accepted by the die (LUN) when it is ready (RDY = 1, ARDY = 1). It is also accepted by the die (LUN) during READ PAGE CACHE (31h, 00h-31h) operations (RDY = 1 and ARDY = 0).

To issue the READ PAGE CACHE LAST (3Fh) command, write 3Fh to the command register. After this command is issued, R/B# goes LOW and the die (LUN) is busy (RDY = 0, ARDY = 0) for <sup>t</sup>RCBSY. After <sup>t</sup>RCBSY, R/B# goes HIGH and the die (LUN) is ready (RDY = 1, ARDY = 1). At this point, data can be output from the cache register, beginning at column address 0. The CHANGE READ COLUMN (05h-E0h) command can be used to change the column address of the data being output from the cache register.

In devices that have more than one LUN per target, during and following interleaved die (multi-LUN) operations the READ STATUS ENHANCED (78h) command followed by the READ MODE (00h) command must be used to select only one die (LUN) and prevent bus contention.

If the READ PAGE CACHE LAST (3Fh) command is issued after a MULTI-PLANE READ PAGE CACHE operation (31h; 00h-32h, 00h-30h), the die (LUN) goes busy until the pages are copied from the data registers to the cache registers. After the die (LUN) is ready (RDY = 1, ARDY = 1), the CHANGE READ COLUMN ENHANCED (06h-E0h) command is used to select which cache register outputs data.

#### Figure 44: READ PAGE CACHE LAST (3Fh) Operation





# READ PAGE MULTI-PLANE (00h-32h)

The READ PAGE MULTI-PLANE (00h-32h) command queues a plane to transfer data from the NAND flash array to its cache register. This command can be issued one or more times. Each time a new plane address is specified, that plane is also queued for data transfer. The READ PAGE (00h-30h) command is issued to select the final plane and to begin the read operation for all previously queued planes. All queued planes will transfer data from the NAND Flash array to their cache registers.

To issue the READ PAGE MULTI-PLANE (00h-32h) command, write 00h to the command register, then write five address cycles to the address register, and conclude by writing 32h to the command register. The column address in the address specified is ignored.

After this command is issued, R/B# goes LOW and the die (LUN) is busy (RDY = 0, ARDY = 0) for <sup>t</sup>DBSY. After <sup>t</sup>DBSY, R/B# goes HIGH and the die (LUN) is ready (RDY = 1, ARDY = 1). At this point, the die (LUN) and block are queued for data transfer from the array to the cache register for the addressed plane. During <sup>t</sup>DBSY, the only valid commands are status operations (70h, 78h) and reset commands (FFh, FCh). Following <sup>t</sup>DBSY, to continue the MULTI-PLANE READ operation, the only valid commands are status operations (70h, 78h), READ PAGE MULTI-PLANE (00h-32h), READ PAGE (00h-30h), and READ PAGE CACHE RANDOM (00h-31h).

Additional READ PAGE MULTI-PLANE (00h-32h) commands can be issued to queue additional planes for data transfer.

If the READ PAGE (00h-30h) command is used as the final command of a MULTI-PLANE READ operation, data is transferred from the NAND Flash array for all of the addressed planes to their respective cache registers. When the die (LUN) is ready (RDY = 1, ARDY = 1), data output is enabled for the cache register linked to the last even plane addressed. When the host requests data output, it begins at the column address specified in the READ PAGE (00h-30h) command. To enable data output in the other cache registers, use the CHANGE READ COLUMN ENHANCED (06h-E0h) command. Additionally, the CHANGE READ COLUMN (05h-E0h) command can be used to change the column address within the currently selected plane.

If the READ PAGE CACHE SEQUENTIAL (31h) is used as the final command of a MULTI-PLANE READ CACHE operation, data is copied from the previously read operation from each plane to each cache register and then data is transferred from the NAND Flash array for all previously addressed planes to their respective data registers. When the die (LUN) is ready (RDY = 1, ARDY = 0), data output is enabled. The CHANGE READ COL-UMN ENHANCED (06h-E0h) command is used to determine which cache register outputs data first. To enable data output in the other cache registers, use the CHANGE READ COLUMN ENHANCED (06h-E0h) command. Additionally, the CHANGE READ COLUMN (05h-E0h) command can be used to change the column address within the currently selected plane.

If the READ PAGE CACHE RANDOM (00h-31h) command is used as the final command of a MULTI-PLANE READ CACHE operation, data is copied from the previously read operation from the data register to the cache register and then data is transferred from the NAND Flash array for all of the addressed planes to their respective data registers. When the die (LUN) is ready (RDY = 1, ARDY = 0), data output is enabled. The CHANGE READ COLUMN ENHANCED (06h-E0h) command is used to determine which cache register outputs data first. To enable data output in the other cache registers, use the CHANGE READ COLUMN ENHANCED (06h-E0h) command. Additionally, the



CHANGE READ COLUMN (05h-E0h) command can be used to change the column address within the currently selected plane.

See Multi-Plane Operations for additional multi-plane addressing requirements.

## Figure 45: READ PAGE MULTI-PLANE (00h-32h) Operation





# **Program Operations**

Program operations are used to move data from the cache or data registers to the NAND array of one or more planes. During a program operation the contents of the cache and/or data registers are modified by the internal control logic.

Within a block, pages must be programmed sequentially from the least significant page address to the most significant page address (i.e. 0, 1, 2, 3, ...). Programming pages out of order within a block is prohibited.

#### **Program Operations**

The PROGRAM PAGE (80h-10h) command, when not preceded by the PROGRAM PAGE MULTI-PLANE (80h-11h) command, programs one page from the cache register to the NAND Flash array. When the die (LUN) is ready (RDY = 1, ARDY = 1), the host should check the FAIL bit to verify that the operation has completed successfully.

#### **Program Cache Operations**

The PROGRAM PAGE CACHE (80h-15h) command can be used to improve program operation system performance. When this command is issued, the die (LUN) goes busy (RDY = 0, ARDY = 0) while the cache register contents are copied to the data register, and the die (LUN) is busy with a program cache operation (RDY = 1, ARDY = 0). While the contents of the data register are moved to the NAND Flash array, the cache register is available for an additional PROGRAM PAGE CACHE (80h-15h) or PROGRAM PAGE (80h-10h) command.

For PROGRAM PAGE CACHE-series (80h-15h) operations, during the die (LUN) busy times, <sup>t</sup>CBSY and <sup>t</sup>LPROG, when RDY = 0 and ARDY = 0, the only valid commands are status operations (70h, 78h) and reset (FFh, FCh). When RDY = 1 and ARDY = 0, the only valid commands during PROGRAM PAGE CACHE-series (80h-15h) operations are status operations (70h, 78h), PROGRAM PAGE CACHE (80h-15h), PROGRAM PAGE (80h-10h), CHANGE WRITE COLUMN (85h), CHANGE ROW ADDRESS (85h), and reset (FFh, FCh).

#### **Multi-Plane Program Operations**

The PROGRAM PAGE MULTI-PLANE (80h-11h) command can be used to improve program operation system performance by enabling multiple pages to be moved from the cache registers to different planes of the NAND Flash array. This is done by prepending one or more PROGRAM PAGE MULTI-PLANE (80h-11h) commands in front of the PRO-GRAM PAGE (80h-10h) command. See Multi-Plane Operations for details.

#### **Multi-Plane Program Cache Operations**

The PROGRAM PAGE MULTI-PLANE (80h-11h) command can be used to improve program cache operation system performance by enabling multiple pages to be moved from the cache registers to the data registers and, while the pages are being transferred from the data registers to different planes of the NAND Flash array, free the cache registers to receive data input from the host. This is done by prepending one or more PROGRAM PAGE MULTI-PLANE (80h-11h) commands in front of the PROGRAM PAGE CACHE (80h-15h) command. See Multi-Plane Operations for details.

# PROGRAM PAGE (80h-10h)

The PROGRAM PAGE (80h-10h) command enables the host to input data to a cache register, and moves the data from the cache register to the specified block and page ad-



dress in the array of the selected die (LUN). This command is accepted by the die (LUN) when it is ready (RDY = 1, ARDY = 1). It is also accepted by the die (LUN) when it is busy with a PROGRAM PAGE CACHE (80h-15h) operation (RDY = 1, ARDY = 0).

To input a page to the cache register and move it to the NAND array at the block and page address specified, write 80h to the command register. Unless this command has been preceded by a PROGRAM PAGE MULTI-PLANE (80h-11h) command, issuing the 80h to the command register clears all of the cache registers' contents on the selected target. Then write five address cycles containing the column address and row address. Data input cycles follow. Serial data is input beginning at the column address specified. At any time during the data input cycle the CHANGE WRITE COLUMN (85h) and CHANGE ROW ADDRESS (85h) commands may be issued. When data input is complete, write 10h to the command register. The selected LUN will go busy (RDY = 0, ARDY = 0) for <sup>t</sup>PROG as data is transferred.

To determine the progress of the data transfer, the host can monitor the target's R/B# signal or, alternatively, the status operations (70h, 78h) may be used. When the die (LUN) is ready (RDY = 1, ARDY = 1), the host should check the status of the FAIL bit.

In devices that have more than one die (LUN) per target, during and following interleaved die (multi-LUN) operations, the READ STATUS ENHANCED (78h) command must be used to select only one die (LUN) for status output. Use of the READ STATUS (70h) command could cause more than one die (LUN) to respond, resulting in bus contention.

The PROGRAM PAGE (80h-10h) command is used as the final command of a multiplane program operation. It is preceded by one or more PROGRAM PAGE MULTI-PLANE (80h-11h) commands. Data is transferred from the cache registers for all of the addressed planes to the NAND array. The host should check the status of the operation by using the status operations (70h, 78h). See Multi-Plane Operations for multi-plane addressing requirements.

## Figure 46: PROGRAM PAGE (80h-10h) Operation





# PROGRAM PAGE CACHE (80h-15h)

The PROGRAM PAGE CACHE (80h-15h) command enables the host to input data to a cache register; copies the data from the cache register to the data register; then moves the data register contents to the specified block and page address in the array of the selected die (LUN). After the data is copied to the data register, the cache register is available for additional PROGRAM PAGE CACHE (80h-15h) or PROGRAM PAGE (80h-10h) commands. The PROGRAM PAGE CACHE (80h-15h) command is accepted by the die (LUN) when it is ready (RDY =1, ARDY = 1). It is also accepted by the die (LUN) when busy with a PROGRAM PAGE CACHE (80h-15h) operation (RDY = 1, ARDY = 0).

To input a page to the cache register to move it to the NAND array at the block and page address specified, write 80h to the command register. Unless this command has been preceded by a PROGRAM PAGE MULTI-PLANE (80h-11h) command, issuing the 80h to the command register clears all of the cache registers' contents on the selected target. Then write five address cycles containing the column address and row address. Data input cycles follow. Serial data is input beginning at the column address specified. At any time during the data input cycle the CHANGE WRITE COLUMN (85h) and CHANGE ROW ADDRESS (85h) commands may be issued. When data input is complete, write 15h to the command register. The selected LUN will go busy (RDY = 0, ARDY = 0) for <sup>t</sup>CBSY to allow the data register to become available from a previous program cache operation, to copy data from the cache register to the data register, and then to begin moving the data register contents to the specified page and block address.

To determine the progress of <sup>t</sup>CBSY, the host can monitor the target's R/B# signal or, alternatively, the status operations (70h, 78h) can be used. When the LUN's status shows that it is busy with a PROGRAM CACHE operation (RDY = 1, ARDY = 0), the host should check the status of the FAILC bit to see if a previous cache operation was successful.

If, after <sup>t</sup>CBSY, the host wants to wait for the program cache operation to complete, without issuing the PROGRAM PAGE (80h-10h) command, the host should monitor ARDY until it is 1. The host should then check the status of the FAIL and FAILC bits.

In devices with more than one die (LUN) per target, during and following interleaved die (multi-LUN) operations, the READ STATUS ENHANCED (78h) command must be used to select only one die (LUN) for status output. Use of the READ STATUS (70h) command could cause more than one die (LUN) to respond, resulting in bus contention.

The PROGRAM PAGE CACHE (80h-15h) command is used as the final command of a multi-plane program cache operation. It is preceded by one or more PROGRAM PAGE MULTI-PLANE (80h-11h) commands. Data for all of the addressed planes is transferred from the cache registers to the corresponding data registers, then moved to the NAND Flash array. The host should check the status of the operation by using the status operations (70h, 78h). See Multi-Plane Operations for multi-plane addressing requirements.



## Figure 47: PROGRAM PAGE CACHE (80h–15h) Operation (Start)



### Figure 48: PROGRAM PAGE CACHE (80h-15h) Operation (End)





# PROGRAM PAGE MULTI-PLANE (80h-11h)

The PROGRAM PAGE MULTI-PLANE (80h-11h) command enables the host to input data to the addressed plane's cache register and queue the cache register to ultimately be moved to the NAND Flash array. This command can be issued one or more times. Each time a new plane address is specified that plane is also queued for data transfer. To input data for the final plane and to begin the program operation for all previously queued planes, issue either the PROGRAM PAGE (80h-10h) command or the PROGRAM PAGE CACHE (80h-15h) command. All of the queued planes will move the data to the NAND Flash array. This command is accepted by the die (LUN) when it is ready (RDY = 1).

To input a page to the cache register and queue it to be moved to the NAND Flash array at the block and page address specified, write 80h to the command register. Unless this command has been preceded by an 11h command, issuing the 80h to the command register clears all of the cache registers' contents on the selected target. Write five address cycles containing the column address and row address; data input cycles follow. Serial data is input beginning at the column address specified. At any time during the data input cycle, the CHANGE WRITE COLUMN (85h) and CHANGE ROW ADDRESS (85h) commands can be issued. When data input is complete, write 11h to the command register. The selected die (LUN) will go busy (RDY = 0, ARDY = 0) for <sup>t</sup>DBSY.

To determine the progress of <sup>t</sup>DBSY, the host can monitor the target's R/B# signal or, alternatively, the status operations (70h, 78h) can be used. When the LUN's status shows that it is ready (RDY = 1), additional PROGRAM PAGE MULTI-PLANE (80h-11h) commands can be issued to queue additional planes for data transfer. Alternatively, the PROGRAM PAGE (80h-10h) or PROGRAM PAGE CACHE (80h-15h) commands can be issued.

When the PROGRAM PAGE (80h-10h) command is used as the final command of a multiplane program operation, data is transferred from the cache registers to the NAND Flash array for all of the addressed planes during <sup>t</sup>PROG. When the die (LUN) is ready (RDY = 1, ARDY = 1), the host should check the status of the FAIL bit for each of the planes to verify that programming completed successfully.

When the PROGRAM PAGE CACHE (80h-15h) command is used as the final command of a MULTI-PLANE PROGRAM CACHE operation, data is transferred from the cache registers to the data registers after the previous array operations finish. The data is then moved from the data registers to the NAND Flash array for all of the addressed planes. This occurs during <sup>t</sup>CBSY. After <sup>t</sup>CBSY, the host should check the status of the FAILC bit for each of the planes from the previous program cache operation, if any, to verify that programming completed successfully.

For the PROGRAM PAGE MULTI-PLANE (80h-11h), PROGRAM PAGE (80h-10h), and PROGRAM PAGE CACHE (80h-15h) commands, see Multi-Plane Operations for multi-plane addressing requirements.



#### Figure 49: PROGRAM PAGE MULTI-PLANE (80h–11h) Operation





# **Erase Operations**

Erase operations are used to clear the contents of a block in the NAND Flash array to prepare its pages for program operations.

#### **Erase Operations**

The ERASE BLOCK (60h-D0h) command, when not preceded by the ERASE BLOCK MUL-TI-PLANE (60h-D1h) command, erases one block in the NAND Flash array. When the die (LUN) is ready (RDY = 1, ARDY = 1), the host should check the FAIL bit to verify that this operation completed successfully.

#### **MULTI-PLANE ERASE Operations**

The ERASE BLOCK MULTI-PLANE (60h-D1h) command can be used to further system performance of erase operations by allowing more than one block to be erased in the NAND array. This is done by prepending one or more ERASE BLOCK MULTI-PLANE (60h-D1h) commands in front of the ERASE BLOCK (60h-D0h) command. See Multi-Plane Operations for details.

# **ERASE BLOCK (60h-D0h)**

The ERASE BLOCK (60h-D0h) command erases the specified block in the NAND Flash array. This command is accepted by the die (LUN) when it is ready (RDY = 1, ARDY = 1).

To erase a block, write 60h to the command register. Then write three address cycles containing the row address; the page address is ignored. Conclude by writing D0h to the command register. The selected die (LUN) will go busy (RDY = 0, ARDY = 0) for <sup>t</sup>BERS while the block is erased.

To determine the progress of an ERASE operation, the host can monitor the target's R/ B# signal, or alternatively, the status operations (70h, 78h) can be used. When the die (LUN) is ready (RDY = 1, ARDY = 1) the host should check the status of the FAIL bit.

In devices that have more than one die (LUN) per target, during and following interleaved die (multi-LUN) operations, the READ STATUS ENHANCED (78h) command must be used to select only one die (LUN) for status output. Use of the READ STATUS (70h) command could cause more than one die (LUN) to respond, resulting in bus contention.

The ERASE BLOCK (60h-D0h) command is used as the final command of a MULTI-PLANE ERASE operation. It is preceded by one or more ERASE BLOCK MULTI-PLANE (60h-D1h) commands. All of blocks in the addressed planes are erased. The host should check the status of the operation by using the status operations (70h, 78h). See Multi-Plane Operations for multi-plane addressing requirements.

#### Figure 50: ERASE BLOCK (60h-D0h) Operation





# ERASE BLOCK MULTI-PLANE (60h-D1h)

The ERASE BLOCK MULTI-PLANE (60h-D1h) command queues a block in the specified plane to be erased in the NAND Flash array. This command can be issued one or more times. Each time a new plane address is specified, that plane is also queued for a block to be erased. To specify the final block to be erased and to begin the ERASE operation for all previously queued planes, issue the ERASE BLOCK (60h-D0h) command. This command is accepted by the die (LUN) when it is ready (RDY = 1, ARDY = 1).

To queue a block to be erased, write 60h to the command register, then write three address cycles containing the row address; the page address is ignored. Conclude by writing D1h to the command register. The selected die (LUN) will go busy (RDY = 0, ARDY = 0) for <sup>t</sup>DBSY.

To determine the progress of <sup>t</sup>DBSY, the host can monitor the target's R/B# signal, or alternatively, the status operations (70h, 78h) can be used. When the LUN's status shows that it is ready (RDY = 1, ARDY = 1), additional ERASE BLOCK MULTI-PLANE (60h-D1h) commands can be issued to queue additional planes for erase. Alternatively, the ERASE BLOCK (60h-D0h) command can be issued to erase all of the queued blocks.

For multi-plane addressing requirements for the ERASE BLOCK MULTI-PLANE (60h-D1h) and ERASE BLOCK (60h-D0h) commands, see Multi-Plane Operations.

### Figure 51: ERASE BLOCK MULTI-PLANE (60h–D1h) Operation





# **Copyback Operations**

COPYBACK operations make it possible to transfer data within a plane from one page to another using the cache register. This is particularly useful for block management and wear leveling.

The COPYBACK operation is a two-step process consisting of a COPYBACK READ (00h-35h) and a COPYBACK PROGRAM (85h-10h) command. To move data from one page to another on the same plane, first issue the COPYBACK READ (00h-35h) command. When the die (LUN) is ready (RDY = 1, ARDY = 1), the host can transfer the data to a new page by issuing the COPYBACK PROGRAM (85h-10h) command. When the die (LUN) is again ready (RDY = 1, ARDY = 1), the host should check the FAIL bit to verify that this operation completed successfully.

To prevent bit errors from accumulating over multiple COPYBACK operations, it is recommended that the host read the data out of the cache register after the COPYBACK READ (00h-35h) completes prior to issuing the COPYBACK PROGRAM (85h-10h) command. The CHANGE READ COLUMN (05h-E0h) command can be used to change the column address. The host should check the data for ECC errors and correct them. When the COPYBACK PROGRAM (85h-10h) command is issued, any corrected data can be input. The CHANGE ROW ADDRESS (85h) command can be used to change the column address.

It is not possible to use the COPYBACK operation to move data from one plane to another or from one die (LUN) to another. Instead, use a READ PAGE (00h-30h) or COPY-BACK READ (00h-35h) command to read the data out of the NAND, and then use a PROGRAM PAGE (80h-10h) command with data input to program the data to a new plane or die (LUN).

Between the COPYBACK READ (00h-35h) and COPYBACK PROGRAM (85h-10h) commands, the following commands are supported: status operations (70h, 78h), and column address operations (05h-E0h, 06h-E0h, 85h). Reset operations (FFh, FCh) can be issued after COPYBACK READ (00h-35h), but the contents of the cache registers on the target are not valid.

In devices which have more than one die (LUN) per target, once the COPYBACK READ (00h-35h) is issued, interleaved die (multi-LUN) operations are prohibited until after the COPYBACK PROGRAM (85h-10h) command is issued.

#### **Multi-Plane Copyback Operations**

Multi-plane copyback read operations improve read data throughput by copying data simultaneously from more than one plane to the specified cache registers. This is done by prepending one or more READ PAGE MULTI-PLANE (00h-32h) commands in front of the COPYBACK READ (00h-35h) command.

The COPYBACK PROGRAM MULTI-PLANE (85h-11h) command can be used to further system performance of COPYBACK PROGRAM operations by enabling movement of multiple pages from the cache registers to different planes of the NAND Flash array. This is done by prepending one or more COPYBACK PROGRAM (85h-11h) commands in front of the COPYBACK PROGRAM (85h-10h) command. See Multi-Plane Operations for details.



# **COPYBACK READ (00h-35h)**

The COPYBACK READ (00h-35h) command is functionally identical to the READ PAGE (00h-30h) command, except that 35h is written to the command register instead of 30h. See READ PAGE (00h-30h) (page 71) for further details.

Though it is not required, it is recommended that the host read the data out of the device to verify the data prior to issuing the COPYBACK PROGRAM (85h-10h) command to prevent the propagation of data errors.

## Figure 52: COPYBACK READ (00h-35h) Operation



### Figure 53: COPYBACK READ (00h-35h) with CHANGE READ COLUMN (05h-E0h) Operation





# **COPYBACK PROGRAM (85h–10h)**

The COPYBACK PROGRAM (85h-10h) command is functionally identical to the PRO-GRAM PAGE (80h-10h) command, except that when 85h is written to the command register, cache register contents are not cleared. See PROGRAM PAGE (80h-10h) for further details.

### Figure 54: COPYBACK PROGRAM (85h–10h) Operation



## Figure 55: COPYBACK PROGRAM (85h-10h) with CHANGE WRITE COLUMN (85h) Operation



# **COPYBACK READ MULTI-PLANE (00h-32h)**

The COPYBACK READ MULTI-PLANE (00h-32h) command is functionally identical to the READ PAGE MULTI-PLANE (00h-32h) command, except that the 35h command is written as the final command. The complete command sequence for the COPYBACK READ PAGE MULTI-PLANE is 00h-32h-00h-35h. See READ PAGE MULTI-PLANE (00h-32h) (page 76) for further details.



# **COPYBACK PROGRAM MULTI-PLANE (85h-11h)**

The COPYBACK PROGRAM MULTI-PLANE (85h-11h) command is functionally identical to the PROGRAM PAGE MULTI-PLANE (80h-11h) command, except that when 85h is written to the command register, cache register contents are not cleared. See PRO-GRAM PAGE MULTI-PLANE (80h-11h) for further details.

### Figure 56: COPYBACK PROGRAM MULTI-PLANE (85h-11h) Operation





# **One-Time Programmable (OTP) Operations**

This Micron NAND Flash device offers a protected, one-time programmable NAND Flash memory area. Each target has a an OTP area with a range of OTP pages (see Table 15 (page 91)); the entire range is guaranteed to be good. Customers can use the OTP area in any way they desire; typical uses include programming serial numbers or other data for permanent storage.

The OTP area leaves the factory in an erased state (all bits are 1). Programming an OTP page changes bits that are 1 to 0, but cannot change bits that are 0 to 1. The OTP area cannot be erased, even if it is not protected. Protecting the OTP area prevents further programming of the pages in the OTP area.

#### **Enabling the OTP Operation Mode**

The OTP area is accessible while the OTP operation mode is enabled. To enable OTP operation mode, issue the SET FEATURES (EFh) command to feature address 90h and write 01h to P1, followed by three cycles of 00h to P2 through P4.

When the target is in OTP operation mode, all subsequent PAGE READ (00h-30h) and PROGRAM PAGE (80h-10h) commands are applied to the OTP area.

ERASE commands are not valid while the target is in OTP operation mode.

#### **Programming OTP Pages**

Each page in the OTP area is programming using the PROGRAM OTP PAGE (80h-10h) command. Each page can be programmed more than once, in sections, up to the maximum number allowed (see NOP in Table 15 (page 91)). The pages in the OTP area must be programmed in ascending order.

If the host issues a PAGE PROGRAM (80h-10h) command to an address beyond the maximum page-address range, the target will be busy for <sup>t</sup>OBSY and the WP# status register bit will be 0, meaning that the page is write-protected.

#### Protecting the OTP Area

To protect the OTP area, issue the OTP PROTECT (80h-10h) command to the OTP Protect Page. When the OTP area is protected it cannot be programmed further. It is not possible to unprotect the OTP area after it has been protected.

#### **Reading OTP Pages**

To read pages in the OTP area, whether the OTP area is protected or not, issue the PAGE READ (00h-30h) command.

If the host issues the PAGE READ (00h-30h) command to an address beyond the maximum page-address range, the data output will not be valid. To determine whether the target is busy during an OTP operation, either monitor R/B# or use the READ STATUS (70h) command. Use of the READ STATUS ENHANCED (78h) command is prohibited while the OTP operation is in progress.

#### Returning to Normal Array Operation Mode

To exit OTP operation mode and return to normal array operation mode, issue the SET FEATURES (EFh) command to feature address 90h and write 00h to P1 through P4.

If the RESET (FFh) command is issued while in OTP operation mode, the target will exit OTP operation mode and enter normal operating mode. If the synchronous interface is active, the target will exit OTP operation and enable the asynchronous interface.



If the SYNCHRONOUS RESET (FCh) command is issued while in the OTP operation mode, the target will exit OTP operation mode and the synchronous interface remains active.

### Table 15: OTP Area Details

Description	Value
Number of OTP pages	30
OTP protect page address	01h
OTP start page address	02h
Number of partial page programs (NOP) to each OTP page	4

# **PROGRAM OTP PAGE (80h-10h)**

The PROGRAM OTP PAGE (80h-10h) command is used to write data to the pages within the OTP area. To program data in the OTP area, the target must be in OTP operation mode.

To use the PROGRAM OTP PAGE (80h-10h) command, issue the 80h command. Issue five address cycles including the column address, the page address within the OTP page range, and a block address of 0. Next, write the data to the cache register using data input cycles. After data input is complete, issue the 10h command.

R/B# goes LOW for the duration of the array programming time, <sup>t</sup>PROG. The READ STA-TUS (70h) command is the only valid command for reading status in OTP operation mode. The RDY bit of the status register will reflect the state of R/B#. Use of the READ STATUS ENHANCED (78h) command is prohibited.

When the target is ready, read the FAIL bit of the status register to determine whether the operation passed or failed (see Status Operations).

The PROGRAM OTP PAGE (80h-10h) command also accepts the CHANGE WRITE COL-UMN (85h) command during data input.

If a PROGRAM PAGE command is issued to the OTP area after the area has been protected, then R/B# goes LOW for <sup>t</sup>OBSY. After <sup>t</sup>OBSY, the status register is set to 60h.

## Figure 57: PROGRAM OTP PAGE (80h-10h) Operation





## Figure 58: PROGRAM OTP PAGE (80h-10h) with CHANGE WRITE COLUMN (85h) Operation



# **PROTECT OTP AREA (80h-10h)**

The PROTECT OTP AREA (80h-10h) command is used to prevent further programming of the pages in the OTP area. The protect the OTP area, the target must be in OTP operation mode.

To protect all data in the OTP area, issue the 80h command. Issue five address cycles including the column address, OTP protect page address and block address; the column and block addresses are fixed to 0. Next, write 00h data for the first byte location and issue the 10h command.

R/B# goes LOW for the duration of the array programming time, <sup>t</sup>PROG. The READ STA-TUS (70h) command is the only valid command for reading status in OTP operation mode. The RDY bit of the status register will reflect the state of R/B#. Use of the READ STATUS ENHANCED (78h) command is prohibited.

When the target is ready, read the FAIL bit of the status register to determine if the operation passed or failed (see Status Operations).

If the PROTECT OTP AREA (80h-10h) command is issued after the OTP area has already been protected, R/B# goes LOW for <sup>t</sup>OBSY. After <sup>t</sup>OBSY, the status register is set to 60h.



#### Figure 59: PROTECT OTP AREA (80h-10h) Operation





# **READ OTP PAGE (00h-30h)**

The READ OTP PAGE (00h-30h) command is used to read data from the pages in the OTP area. To read data in the OTP area, the target must be in OTP operation mode.

To use the READ OTP PAGE (00h-30h) command, issue the 00h command. Issue five address cycles including the column address, the page address within the OTP page range, and a block address of 0. Next, issue the 30h command. The selected die (LUN) will go busy (RDY = 0, ARDY = 0) for <sup>t</sup>R as data is transferred.

To determine the progress of the data transfer, the host can monitor the target's R/B# signal, or alternatively the READ STATUS (70h) command can be used. If the status operations are used to monitor the die's (LUN's) status, when the die (LUN) is ready (RDY = 1, ARDY = 1) the host disables status output and enables data output by issuing the READ MODE (00h) command. When the host requests data output, it begins at the column address specified.

Additional pages within the OTP area can be read by repeating the READ OTP PAGE (00h-30h) command.

The READ OTP PAGE (00h-30h) command is compatible with the CHANGE READ COL-UMN (05h-E0h) command. Use of the READ STATUS ENHANCED (78h) and CHANGE READ COLUMN ENHANCED (06h-E0h) commands are prohibited.

#### Figure 60: READ OTP PAGE (00h-30h) Operation





# 16Gb, 32Gb Asynchronous/Synchronous NAND Multi-Plane Operations

# **Multi-Plane Operations**

Each NAND Flash logical unit (LUN) is divided into multiple physical planes. Each plane contains a cache register and a data register independent of the other planes. The planes are addressed via the low-order block address bits. Specific details are provided in Device and Array Organization.

Multi-plane operations make better use of the NAND Flash arrays on these physical planes by performing concurrent READ, PROGRAM, or ERASE operations on multiple planes, significantly improving system performance. Multi-plane operations must be of the same type across the planes; for example, it is not possible to perform a PROGRAM operation on one plane with an ERASE operation on another.

When issuing MULTI-PLANE PROGRAM or ERASE operations, use the READ STATUS (70h) command and check whether the previous operation(s) failed. If the READ STA-TUS (70h) command indicates that an error occurred (FAIL = 1 and/or FAILC = 1), use the READ STATUS ENHANCED (78h) command—time for each plane—to determine which plane operation failed.

# **Multi-Plane Addressing**

Multi-plane commands require an address per operational plane. For a given multiplane operation, these addresses are subject to the following requirements:

- The LUN address bit(s) must be identical for all of the issued addresses.
- The plane select bit, BA[8], must be different for each issued address.
- The page address bits, PA[7:0], must be identical for each issued address.

The READ STATUS (70h) command should be used following MULTI-PLANE PRO-GRAM PAGE and ERASE BLOCK operations on a single die (LUN).



# 16Gb, 32Gb Asynchronous/Synchronous NAND Interleaved Die (Multi-LUN) Operations

# **Interleaved Die (Multi-LUN) Operations**

In devices that have more than one die (LUN) per target, it is possible to improve performance by interleaving operations between the die (LUNs). An interleaved die (multi-LUN) operation is one that is issued to an idle die (LUN) (RDY = 1) while another die (LUN) is busy (RDY = 0).

Interleaved die (multi-LUN) operations are prohibited following RESET (FFh, FCh), identification (90h, ECh, EDh), and configuration (EEh, EFh) operations until ARDY =1 for all of the die (LUNs) on the target.

During an interleaved die (multi-LUN) operation, there are two methods to determine operation completion. The R/B# signal indicates when all of the die (LUNs) have finished their operations. R/B# remains LOW while any die (LUN) is busy. When R/B# goes HIGH, all of the die (LUNs) are idle and the operations are complete. Alternatively, the READ STATUS ENHANCED (78h) command can report the status of each die (LUN) individually.

If a die (LUN) is performing a cache operation, like PROGRAM PAGE CACHE (80h-15h), then the die (LUN) is able to accept the data for another cache operation when status register bit 6 is 1. All operations, including cache operations, are complete on a die when status register bit 5 is 1.

Use the READ STATUS ENHANCED (78h) command to monitor status for the addressed die (LUN). When multi-plane commands are used with interleaved die (multi-LUN) operations, the multi-plane commands must also meet the requirements, see Multi-Plane Operations for details. After the READ STATUS ENHANCED (78h) command has been issued, the READ STATUS (70h) command may be issued for the previously addressed die (LUN).

See Command Definitions for the list of commands that can be issued while other die (LUNs) are busy.

During an interleaved die (multi-LUN) operation that involves a PROGRAM-series (80h-10h, 80h-15h, 80h-11h) operation and a READ operation, the PROGRAM-series operation must be issued before the READ-series operation. The data from the READ-series operation must be output to the host before the next PROGRAM-series operation is issued. This is because the 80h command clears the cache register contents of all cache registers on all planes.



# 16Gb, 32Gb Asynchronous/Synchronous NAND Error Management

# **Error Management**

Each NAND Flash die (LUN) is specified to have a minimum number of valid blocks (NVB) of the total available blocks. This means the die (LUNs) could have blocks that are invalid when shipped from the factory. An invalid block is one that contains at least one page that has more bad bits than can be corrected by the minimum required ECC. Additional blocks can develop with use. However, the total number of available blocks per die (LUN) will not fall below NVB during the endurance life of the product.

Although NAND Flash memory devices could contain bad blocks, they can be used quite reliably in systems that provide bad-block management and error-correction algorithms. This type of software environment ensures data integrity.

Internal circuitry isolates each block from other blocks, so the presence of a bad block does not affect the operation of the rest of the NAND Flash array.

NAND Flash devices are shipped from the factory erased. The factory identifies invalid blocks before shipping by attempting to program the bad-block mark into every location in the first page of each invalid block. It may not be possible to program every location with the bad-block mark. However, the first spare area location in each bad block is guaranteed to contain the bad-block mark. This method is compliant with ON-FI Factory Defect Mapping requirements. See the following table for the first spare area location and the bad-block mark.

System software should check the first spare area location on the first page of each block prior to performing any PROGRAM or ERASE operations on the NAND Flash device. A bad block table can then be created, enabling system software to map around these areas. Factory testing is performed under worst-case conditions. Because invalid blocks could be marginal, it may not be possible to recover this information if the block is erased.

Over time, some memory locations may fail to program or erase properly. In order to ensure that data is stored properly over the life of the NAND Flash device, the following precautions are required:

- Always check status after a PROGRAM or ERASE operation
- Under typical conditions, use the minimum required ECC (see table below)
- · Use bad-block management and wear-leveling algorithms

The first block (physical block address 00h) for each CE# is guaranteed to be valid with ECC when shipped from the factory.

#### **Table 16: Error Management Details**

Description	Requirement
Minimum number of valid blocks (NVB) per LUN	1998
Total available blocks per LUN	2048
First spare area location	Byte 4096
Bad-block mark	00h
Minimum required ECC	24-bit ECC per 1080 bytes of data



# **Shared Pages**

In MLC NAND Flash devices, each memory cell contains two bits of data. These bits are distributed across two NAND pages. Pages within a NAND block that share the same NAND memory cells are referred to as shared pages. If any program operation is interrupted (for example, power loss or reset), data in previously programmed shared pages can also be corrupted.

#### **Table 17: Shared Pages**

Shared I	Pages	Shared Pages					
0	4	126	132				
1	5	127	133				
2	8	130	136				
3	9	131	137				
6	12	134	140				
7	13	135	141				
10	16	138	144				
11	17	139	145				
14	20	142	148				
15	21	143	149				
18	24	146	152				
19	25	147	153				
22	28	150	156				
23	29	151	157				
26	32	154	160				
27	33	155	161				
30	36	158	164				
31	37	159	165				
34	40	162	168				
35	41	163	169				
38	44	166	172				
39	45	167	173				
42	48	170	176				
43	49	171	177				
46	52	174	180				
47	53	175	181				
50	56	178	184				
51	57	179	185				
54	60	182	188				
55	61	183	189				
58	64	186	192				
59	65	187	193				



# 16Gb, 32Gb Asynchronous/Synchronous NAND Shared Pages

## Table 17: Shared Pages (Continued)

Shared I	Pages	Shared Pages				
62	68	190	196			
63	69	191	197			
66	72	194	200			
67	73	195	201			
70	76	198	204			
71	77	199	205			
74	80	202	208			
75	81	203	209			
78	84	206	212			
79	85	207	213			
82	88	210	216			
83	89	211	217			
86	92	214	220			
87	93	215	221			
90	96	218	224			
91	97	219	225			
94	100	222	228			
95	101	223	229			
98	104	226	232			
99	105	227	233			
102	108	230	236			
103	109	231	237			
106	112	234	240			
107	113	235	241			
110	116	238	244			
111	117	239	245			
114	120	242	248			
115	121	243	249			
118	124	246	252			
119	125	247	253			
122	128	250	254			
123	129	251	255			



# 16Gb, 32Gb Asynchronous/Synchronous NAND Output Drive Impedance

# **Output Drive Impedance**

Because NAND Flash is designed for use in systems that are typically point-to-point connections, an option to control the drive strength of the output buffers is provided. Drive strength should be selected based on the expected loading of the memory bus. There are four supported settings for the output drivers: overdrive 2, overdrive 1, nominal, and underdrive.

The nominal output drive strength setting is the power-on default value. The host can select a different drive strength setting using the SET FEATURES (EFh) command.

The output impedance range from minimum to maximum covers process, voltage, and temperature variations. Devices are not guaranteed to be at the nominal line.

Process	Voltage	Temperature
Fast-Fast	3.6V	–40°C
Typical-Typical	3.3V	+25°C
Slow-Slow	2.7V	+85°C
	Fast-Fast Typical-Typical Slow-Slow	Fast-Fast3.6VTypical-Typical3.3VSlow-Slow2.7V

# Table 18: Output Drive Strength Conditions (V<sub>CCQ</sub> = 2.7–3.6V)

Output Strength	Rpd/Rpu	V <sub>OUT</sub> to V <sub>SSQ</sub>	Minimum	Nominal	Maximum	Unit
Overdrive 2	Rpd	V <sub>CCQ</sub> X 0.2	7.0	16.2	28.7	ohms
		V <sub>CCQ</sub> X 0.5	9.0	18.0	36.0	ohms
		V <sub>CCQ</sub> X 0.8	11.8	21.0	50.0	ohms
	Rpu	V <sub>CCQ</sub> X 0.2	11.8	21.0	50.0	ohms
		V <sub>CCQ</sub> X 0.5	9.0	18.0	36.0	ohms
		V <sub>CCQ</sub> X 0.8	7.0	14.0	28.7	ohms
Overdrive 1	Rpd	V <sub>CCQ</sub> X 0.2	9.3	22.3	40.0	ohms
		V <sub>CCQ</sub> X 0.5	12.6	6 25.0		ohms
		V <sub>CCQ</sub> X 0.8	16.3	29.0	68.0	ohms
	Rpu	V <sub>CCQ</sub> X 0.2	16.3	29.0	68.0	ohms
		V <sub>CCQ</sub> X 0.5	12.6	25.0	50.0	ohms
		V <sub>CCQ</sub> X 0.8	9.3	19.0	40.0	ohms
Nominal	Rpd	V <sub>CCQ</sub> X 0.2	12.8	32.0	58.0	ohms
		V <sub>CCQ</sub> X 0.5	18.0	35.0	70.0	ohms
		V <sub>CCQ</sub> X 0.8	23.0	40.0	95.0	ohms
	Rpu	V <sub>CCQ</sub> X 0.2	23.0	40.0	95.0	ohms
		V <sub>CCQ</sub> X 0.5	18.0	35.0	70.0	ohms
		V <sub>CCQ</sub> X 0.8	12.8	32.0	58.0	ohms

### Table 19: Output Drive Strength Impedance Values (V<sub>CCQ</sub> = 2.7–3.6V)



# Table 19: Output Drive Strength Impedance Values ( $V_{CCQ} = 2.7-3.6V$ ) (Continued)

Output Strength	Rpd/Rpu	V <sub>OUT</sub> to V <sub>SSQ</sub>	Minimum	Nominal	Maximum	Unit
Underdrive	Rpd	V <sub>CCQ</sub> X 0.2	18.4	45.0	80.0	ohms
		V <sub>CCQ</sub> X 0.5	25.0	50.0	100.0	ohms
		V <sub>CCQ</sub> X 0.8	32.0	57.0	136.0	ohms
Rpu		V <sub>CCQ</sub> X 0.2	32.0	57.0	136.0	ohms
		V <sub>CCQ</sub> X 0.5	25.0	50.0	100.0	ohms
		V <sub>CCQ</sub> X 0.8	18.4	45.0	80.0	ohms

### Table 20: Pull-Up and Pull-Down Output Impedance Mismatch

Drive Strength	Minimum	Maximum	Unit	Notes
Overdrive 2	0	6.3	ohms	1, 2
Overdrive 1	0	8.8	ohms	1, 2
Nominal	0	12.3	ohms	1, 2
Underdrive	0	17.5	ohms	1, 2

Notes: 1. Mismatch is the absolute value between pull-up and pull-down impedances. Both are measured at the same temperature and voltage.

2. Test conditions:  $V_{CCQ} = V_{CCQ}$  (MIN),  $V_{OUT} = V_{CCQ} \times 0.5$ ,  $T_A = T_{OPER}$ .



# 16Gb, 32Gb Asynchronous/Synchronous NAND AC Overshoot/Undershoot Specifications

# **AC Overshoot/Undershoot Specifications**

The supported AC overshoot and undershoot area depends on the timing mode selected by the host.

## Table 21: Overshoot/Undershoot Parameters

		Timing Mode							
Parameter	0	1	2	3	4	5	Unit		
Maximum peak amplitude provided for overshoot area	1	1	1	1	1	1	V		
Maximum peak amplitude provided for undershoot area	1	1	1	1	1	1	V		
Maximum overshoot area above V <sub>CCQ</sub>	3	3	3	2.25	1.8	1.5	V-ns		
Maximum undershoot area below V <sub>SSQ</sub>	3	3	3	2.25	1.8	1.5	V-ns		

#### **Figure 61: Overshoot**



#### Figure 62: Undershoot





# 16Gb, 32Gb Asynchronous/Synchronous NAND Synchronous Input Slew Rate

# Synchronous Input Slew Rate

Though all AC timing parameters are tested with a nominal input slew rate of 1 V/ns, it is possible to run the device at a slower slew rate. The input slew rates shown below are sampled, and not 100% tested. When using slew rates slower than the minimum values, timing must be derated by the host.

### Table 22: Test Conditions for Input Slew Rate

Parameter	Value
Rising edge	V <sub>IL(DC)</sub> To V <sub>IH(AC)</sub>
Falling edge	V <sub>IH(DC)</sub> To V <sub>IL(AC)</sub>
Temperature range	T <sub>A</sub>

## Table 23: Input Slew Rate (V<sub>CCQ</sub>= 2.7–3.6V)

Command/		CLK/DQS Slew Rate Derating V <sub>IH(AC)</sub> /V <sub>IL(AC)</sub> = 990mV, V <sub>IH(DC)</sub> /V <sub>IL(DC)</sub> = 660mV															
Address		1	0	.9	0	.8	0	.7	0	.6	0	.5	0	.4	0	.3	
and DQ V/ns	set	hold	set	hold	set	hold	set	hold	set	hold	set	hold	set	hold	set	hold	Unit
1	0	0	0	0	-	-	-	-	I	-	-	-	-	-	-	-	ps
0.9	0	0	0	0	0	0	-	-	I	-	-	-	-	-	-	-	ps
0.8	-	-	0	0	0	0	0	0	I	-	-	-	-	-	-	-	ps
0.7	-	-	-	-	0	0	0	0	0	0	-	-	-	-	-	-	ps
0.6	-	-	-	-	-	-	0	0	0	0	0	0	-	-	-	-	ps
0.5	-	-	-	-	-	-	-	-	0	0	0	0	330	330	-	-	ps
0.4	-	-	-	-	-	-	-	-	-	-	330	330	660	660	1210	1210	ps
0.3	-	-	-	-	-	-	-	-	-	-	-	-	1210	1210	1760	1760	ps



# **Output Slew Rate**

The output slew rate is tested using the following setup with only one die per DQ channel.

## **Table 24: Test Conditions for Output Slew Rate**

Parameter	Value
V <sub>OL(DC)</sub>	0.3 × V <sub>CCQ</sub>
V <sub>OH(DC)</sub>	0.7 × V <sub>CCQ</sub>
V <sub>OL(AC)</sub>	$0.2 \times V_{CCQ}$
V <sub>OH(AC)</sub>	$0.8 \times V_{CCQ}$
Rising edge ( <sup>t</sup> RISE)	V <sub>OL(DC)</sub> to V <sub>OH(AC)</sub>
Falling edge ( <sup>t</sup> FALL)	V <sub>OH(DC)</sub> to V <sub>OL(AC)</sub>
Output capacitive load (C <sub>LOAD</sub> )	5pF
Temperature range	T <sub>A</sub>

## Table 25: Output Slew Rate (V<sub>CCQ</sub> = 2.7–3.6V)

Output Drive Strength	Min	Max	Unit
Overdrive 2	1.5	10.0	V/ns
Overdrive 1	1.5	9.0	V/ns
Nominal	1.2	7.0	V/ns
Underdrive	1.0	5.5	V/ns



# **Electrical Specifications**

Stresses greater than those listed can cause permanent damage to the device. This is a stress rating only, and functional operation of the device at these or any other conditions above those indicated in the operational sections of this specification is not guaranteed. Exposure to absolute maximum rating conditions for extended periods can affect reliability.

### Table 26: Absolute Maximum Ratings by Device

Parameter	Symbol	Min <sup>1</sup>	Max <sup>1</sup>	Unit
Voltage input	V <sub>IN</sub>	-0.6	4.6	V
V <sub>CC</sub> supply voltage	V <sub>cc</sub>	-0.6	4.6	V
V <sub>CCQ</sub> supply voltage	V <sub>CCQ</sub>	-0.6	4.6	V
Storage temperature	T <sub>STG</sub>	-65	150	°C

Note: 1. Voltage on any pin relative to V<sub>SS</sub>.

## **Table 27: Recommended Operating Conditions**

Parameter	Symbol	Min	Тур	Max	Unit	
Operating temperature	rating temperature Commercial			_	70	°C
	Industrial		-40	_	85	
V <sub>CC</sub> supply voltage		V <sub>cc</sub>	2.7	3.3	3.6	V
V <sub>CCQ</sub> supply voltage		V <sub>CCQ</sub>	2.7	3.3	3.6	V
V <sub>ss</sub> ground voltage	s ground voltage			0	0	V
V <sub>SSQ</sub> ground voltage		V <sub>SSQ</sub>	0	0	0	V

#### Table 28: Valid Blocks per LUN

Parameter	Symbol	Min	Мах	Unit	Notes
Valid block number	NVB	1998	2048	Blocks	1

Note: 1. Invalid blocks are block that contain one or more bad bits beyond ECC. The device may contain bad blocks upon shipment. Additional bad blocks may develop over time; how-ever, the total number of available blocks will not drop below NVB during the endur-ance life of the device. Do not erase or program blocks marked invalid from the factory.

#### Table 29: Capacitance: 48-Pin TSOP Package

Description	Symbol	Device	Max	Unit	Notes
Input capacitance – ALE, CE#, CLE, RE#	C <sub>IN</sub>	Single die package	6	pF	1
WE#, WP#		Dual die package	10		
Input/output capacitance – DQ[7:0], DQS	C <sub>IO</sub>	Single die package	5	pF	1
		Dual die package	8		

Note: 1. These parameters are verified in device characterization and are not 100% tested. Test conditions:  $T_c = 25^{\circ}C$ ; f = 1 MHz; Vin = 0V.

## 16Gb, 32Gb Asynchronous/Synchronous NAND Electrical Specifications – DC Characteristics and Operating Conditions (Asynchronous)

#### Table 30: Capacitance: 56-Ball BGA Package

Description	Symbol	Device	Мах	Unit	Notes
Input capacitance – ALE, CE#, CLE, RE#, WE#, WP#	C <sub>IN</sub>	Single die package	7	pF	1
Input/output capacitance – DQ[7:0]	C <sub>IO</sub>	Single die package	6	pF	1

Note: 1. These parameters are verified in device characterization and are not 100% tested. Test conditions:  $T_C = 25^{\circ}C$ ; f = 1 MHz; Vin = 0V.

#### **Table 31: Test Conditions**

Parameter	Value	Notes
Rising input transition	V <sub>IL(DC)</sub> to V <sub>IH(AC)</sub>	1
Falling input transition	V <sub>IH(DC)</sub> to V <sub>IL(AC)</sub>	1
Input rise and fall slew rates	1 V/ns	_
Input and output timing levels	V <sub>CCQ</sub> /2	-
Output load: Nominal output drive strength	$C_L = 5pF$	2, 3

Notes: 1. The receiver will effectively switch as a result of the signal crossing the AC input level; it will remain in that status as long as the signal does not ring back above (below) the DC input LOW (HIGH) level.

- 2. Transmission line delay is assumed to be very small.
- 3. This test setup applies to all package configurations.

# Electrical Specifications – DC Characteristics and Operating Conditions (Asynchronous)

#### Table 32: DC Characteristics and Operating Conditions (Asynchronous Interface)

Parameter	Conditions	Symbol	Min <sup>1</sup>	Typ <sup>1</sup>	Max <sup>1</sup>	Unit
Array read current (active)	_	I <sub>CC1_A</sub>	_	20	50	mA
Array program current (active)	_	I <sub>CC2_A</sub>	_	20	50	mA
Erase current (active)	_	I <sub>CC3_A</sub>	_	20	50	mA
I/O burst read current	<sup>t</sup> RC = <sup>t</sup> RC (MIN); I <sub>OUT</sub> = 0mA	I <sub>CC4R_A</sub>	_	8	10	mA
I/O burst write current	$^{t}WC = ^{t}WC (MIN)$	I <sub>CC4w_A</sub>	_	8	10	mA
Bus idle current	_	I <sub>CC5_A</sub>	_	3	5	mA
Current during first RESET command after power-on	_	I <sub>CC6</sub>	-	-	10	mA
Standby current - V <sub>CC</sub>	CE# = V <sub>CCQ</sub> - 0.2V; WP# = 0V/V <sub>CCQ</sub>	I <sub>SB</sub>	-	10	50	μA
Standby current - V <sub>CCQ</sub>	$CE\# = V_{CCQ} - 0.2V;$ $WP\# = 0V/V_{CCQ}$	I <sub>SBQ</sub>	-	3	10	μA
Staggered power-up current	<sup>t</sup> RISE = 1ms; C <sub>LINE</sub> = 0.1uF	I <sub>ST</sub>	_	-	10	mA

Note: 1. All values are per die (LUN) unless otherwise specified.



# Electrical Specifications – DC Characteristics and Operating Conditions (Synchronous)

Parameter	Conditions	Symbol	Min <sup>1</sup>	Typ <sup>1</sup>	Max <sup>1</sup>	Unit
Array read current (active)	$CE\# = V_{IL}; {}^{t}CK = {}^{t}CK (MIN)$	I <sub>CC1_S</sub>	-	25	50	mA
Array program current (active)	${}^{t}CK = {}^{t}CK$ (MIN)	I <sub>CC2_S</sub>	-	25	50	mA
Erase current (active)	${}^{t}CK = {}^{t}CK$ (MIN)	I <sub>CC3_S</sub>	-	25	50	mA
I/O burst read current	${}^{t}CK = {}^{t}CK$ (MIN)	I <sub>CC4R_S</sub>	-	20	27	mA
I/O burst write current	${}^{t}CK = {}^{t}CK$ (MIN)	I <sub>CC4W_S</sub>	-	20	27	mA
Bus idle current	${}^{t}CK = {}^{t}CK$ (MIN)	I <sub>CC5_S</sub>	-	5	10	mA
Standby current - V <sub>CC</sub>	CE# = V <sub>CCQ</sub> - 0.2V; WP# = 0V/V <sub>CCQ</sub>	I <sub>SB</sub>	-	10	50	μA
Standby Current - V <sub>CCQ</sub>	CE# = V <sub>CCQ</sub> - 0.2V; WP# = 0V/V <sub>CCQ</sub>	I <sub>SBQ</sub>	-	3	10	μA

#### Table 33: DC Characteristics and Operating Conditions (Synchronous Interface)

Note: 1. All values are per die (LUN) unless otherwise specified.

# Electrical Specifications – DC Characteristics and Operating Conditions ( $V_{CCQ}$ )

#### **Table 34: DC Characteristics and Operating Conditions**

Parameter	Condition	Symbol	Min	Тур	Мах	Unit	Notes
AC input high voltage	CE#, DQ[7:0], DQS, ALE, CLE, CLK	V <sub>IH(AC)</sub>	$0.8 \times V_{CCQ}$	I	V <sub>CCQ</sub> + 0.3	V	
AC input low voltage	(WE#), W/R# (RE#), WP#	V <sub>IL(AC)</sub>	-0.3	I	$0.2 \times V_{CCQ}$	V	
DC input high voltage	DQ[7:0], DQS, ALE, CLE, CLK	V <sub>IH(DC)</sub>	$0.7 \times V_{CCQ}$	I	V <sub>CCQ</sub> + 0.3	V	
DC input low voltage	(WE#), W/R# (RE#)	V <sub>IL(DC)</sub>	-0.3	-	0.3 × V <sub>CCQ</sub>	V	
Input leakage current	Any input V <sub>IN</sub> = 0V to V <sub>CCQ</sub> (all other pins under test = 0V)	ILI	-	-	±10	μA	
Output leakage cur- rent	DQ are disabled; $V_{OUT} = 0V$ to $V_{CCQ}$	I <sub>LO</sub>	-	-	±10	μA	1
Output low current (R/B#)	V <sub>OL</sub> = 0.4V	I <sub>OL</sub> (R/B#)	8	10	_	mA	2

Notes: 1. All leakage currents are per die (LUN). Two die (LUNs) have a maximum leakage current of ±20μA and four die (LUNs) have a maximum leakage current of ±40μA in the asynchronous interface.

2. DC characteristics may need to be relaxed if R/B# pull-down strength is not set to full strength. See Table 14 (page 60) for additional details.

# Electrical Specifications – AC Characteristics and Operating Conditions (Asynchronous)



# 16Gb, 32Gb Asynchronous/Synchronous NAND Electrical Specifications – AC Characteristics and Operating Conditions (Asynchronous)

#### Table 35: AC Characteristics: Asynchronous Command, Address, and Data

		Mo	de 0	Мо	de 1	Mo	de 2	Mo	de 3	Mo	de 4	Mo	de 5		
Parameter	Symbol	Min	Max	Unit	Notes										
Clock period		10	00	5	0	3	5	3	0	2	5	2	20	ns	
Frequency		≈	10	≈	≈20		≈28		≈33		≈40		50	MHz	
ALE to data start	<sup>t</sup> ADL	200	_	100	-	100	-	100	-	70	-	70	-	ns	1
ALE hold time	<sup>t</sup> ALH	20	_	10	-	10	-	5	-	5	-	5	-	ns	
ALE setup time	<sup>t</sup> ALS	50	_	25	-	15	-	10	-	10	-	10	-	ns	
ALE to RE# delay	<sup>t</sup> AR	25	-	10	-	10	-	10	-	10	-	10	-	ns	
CE# access time	<sup>t</sup> CEA	-	100	-	45	-	30	-	25	-	25	-	25	ns	
CE# hold time	<sup>t</sup> CH	20	-	10	-	10	-	5	-	5	-	5	-	ns	
CE# HIGH to output High-Z	<sup>t</sup> CHZ	_	100	_	50	_	50	_	50	_	30	-	30	ns	2
CLE hold time	<sup>t</sup> CLH	20	_	10	-	10	-	5	-	5	-	5	-	ns	
CLE to RE# delay	<sup>t</sup> CLR	20	-	10	-	10	-	10	-	10	-	10	-	ns	
CLE setup time	<sup>t</sup> CLS	50	_	25	-	15	-	10	-	10	-	10	-	ns	
CE# HIGH to output hold	<sup>t</sup> COH	0	_	15	_	15	_	15	_	15	-	15	-	ns	
CE# setup time	tCS	70	_	35	-	25	-	25	-	20	-	15	-	ns	
Data hold time	<sup>t</sup> DH	20	_	10	-	5	-	5	-	5	-	5	-	ns	
Data setup time	<sup>t</sup> DS	40	_	20	-	15	-	10	-	10	-	7	-	ns	
Output High-Z to RE# LOW	<sup>t</sup> IR	10	-	0	-	0	-	0	-	0	-	0	-	ns	
RE# cycle time	<sup>t</sup> RC	100	_	50	-	35	_	30	_	25	_	20	-	ns	
RE# access time	<sup>t</sup> REA	_	40	_	30	_	25	_	20	_	20	_	16	ns	3
RE# HIGH hold time	tREH	30	_	15	-	15	_	10	-	10	-	7	-	ns	3
RE# HIGH to output hold	<sup>t</sup> RHOH	0	-	15	-	15	-	15	-	15	-	15	-	ns	3
RE# HIGH to WE# LOW	<sup>t</sup> RHW	200	_	100	-	100	-	100	-	100	-	100	-	ns	
RE# HIGH to output High-Z	<sup>t</sup> RHZ	_	200	_	100	_	100	_	100	_	100	-	100	ns	2, 3
RE# LOW to output hold	<sup>t</sup> RLOH	0	_	0	-	0	_	0	-	5	-	5	-	ns	3
RE# pulse width	<sup>t</sup> RP	50	_	25	-	17	_	15	_	12	-	10	_	ns	
Ready to RE# LOW	<sup>t</sup> RR	40	_	20	-	20	_	20	_	20	-	20	_	ns	
WE# HIGH to R/B# LOW	tWB	-	200	-	100	-	100	-	100	-	100	-	100	ns	4
WE# cycle time	tWC	100	_	45	_	35	-	30	_	25	-	20	-	ns	
WE# HIGH hold time	tWH	30	_	15	_	15	-	10	_	10	-	7	-	ns	
WE# HIGH to RE# LOW	tWHR	120	-	80	-	80	-	60	-	60	-	60	-	ns	



#### Table 35: AC Characteristics: Asynchronous Command, Address, and Data (Continued)

		Mode 0		Mode 0 Mode 1		Mode 2 Mod		de 3 Mode 4		Mode 5					
Parameter	Symbol	Min	Max	Min	Max	Min	Мах	Min	Мах	Min	Max	Min	Max	Unit	Notes
WE# pulse width	<sup>t</sup> WP	50	_	25	_	17	_	15	_	12	-	10	-	ns	
WP# transition to WE# LOW	tWW	100	-	100	-	100	-	100	-	100	-	100	-	ns	

Notes: 1. Timing for <sup>t</sup>ADL begins in the address cycle, on the final rising edge of WE# and ends with the first rising edge of WE# for data input.

2. Data transition is measured ±200mV from steady-steady voltage with load. This parameter is sampled and not 100 percent tested.

3. AC characteristics may need to be relaxed if output drive strength is not set to at least nominal.

4. Do not issue a new command during <sup>t</sup>WB, even if R/B# or RDY is ready.


#### 16Gb, 32Gb Asynchronous/Synchronous NAND Electrical Specifications – AC Characteristics and Operating Conditions (Synchronous)

# Electrical Specifications – AC Characteristics and Operating Conditions (Synchronous)

#### Mode 0 Mode 1 Mode 2 Mode 3 Mode 4 Mode 5 Parameter Symbol Min Max Min Max Min Max Min Max Min Мах Min Max Unit Notes 50 Clock period 30 20 12 10 15 ns ≈67 Frequency ≈20 ≈33 ≈50 ≈83 ≈100 MHz Access window <sup>t</sup>AC 20 3 3 3 3 3 3 20 20 20 20 20 ns of DQ[7:0] from CLK ALE to data <sup>t</sup>ADL 100 100 70 70 70 70 \_ \_ \_ \_ \_ \_ ns loading time Command, ad-<sup>t</sup>CAD 25 25 25 25 25 25 1 ns \_ \_ \_ \_ \_ \_ dress data delay ALE, CLE, W/R# <sup>t</sup>CALH 5 4 3 2.5 2 10 \_ \_ \_ \_ \_ \_ ns hold <sup>t</sup>CALS 3 2 ALE, CLE, W/R# 5 2.5 10 4 ns \_ \_ setup DQ hold - com-<sup>t</sup>CAH 10 5 4 3 2.5 2 ns \_ \_ \_ \_ \_ mand, address DQ setup - com-<sup>t</sup>CAS 10 5 3 2.5 2 4 ns \_ \_ \_ \_ \_ \_ mand, address CE# hold <sup>t</sup>CH 10 5 4 3 2.5 2 ns \_ \_ \_ \_ \_ \_ <sup>t</sup>CK (avg) Average CLK cy-50 100 30 50 20 30 15 20 12 15 10 12 ns 3 cle time Absolute CLK <sup>t</sup>CK (abs) <sup>t</sup>CK (abs) MIN = <sup>t</sup>CK (avg) + <sup>t</sup>JIT (per) MIN ns <sup>t</sup>CK (abs) MAX = <sup>t</sup>CK (avg) + <sup>t</sup>JIT (per) MAX cycle time, from rising edge to rising edge CLK cycle HIGH <sup>t</sup>CKH 0.43 0.57 0.43 0.57 0.43 0.57 0.43 0.57 0.43 0.57 0.43 0.57 <sup>t</sup>CK 4 (abs) <sup>t</sup>CKL 0.57 0.57 0.43 <sup>t</sup>CK CLK cycle LOW 0.43 0.43 0.57 0.43 0.57 0.43 0.57 0.43 0.57 4 (abs) <sup>t</sup>CKWR(MIN) = RoundUp[(<sup>t</sup>DQSCK(MAX) + <sup>t</sup>CK)/<sup>t</sup>CK] <sup>t</sup>CK Data output <sup>t</sup>CKWR end to W/R# HIGH CE# setup tCS 35 25 15 15 15 15 \_ ns Data In hold <sup>t</sup>DH 5 2.5 1.7 1.3 1.1 0.8 \_ \_ \_ \_ \_ \_ ns Access window <sup>t</sup>DQSCK 20 20 20 20 20 20 ns \_ \_ \_ \_ \_ \_ of DOS from CLK DOS, DO[7:0] <sup>t</sup>DOSD 18 18 18 18 18 18 \_ ns \_ \_ \_ \_ \_ Driven by NAND

#### Table 36: AC Characteristics: Synchronous Command, Address, and Data



# 16Gb, 32Gb Asynchronous/Synchronous NAND Electrical Specifications – AC Characteristics and Operating Conditions (Synchronous)

#### Table 36: AC Characteristics: Synchronous Command, Address, and Data (Continued)

	Mode 0         Mode 1         Mode 2         Mode 3         Mode 4         Mode 5						de 5								
Parameter	Symbol	Min	Max	Min	Max	Min	Max	Min	Max	Min	Max	Min	Max	Unit	Notes
DQS, DQ[7:0] to tri-state	<sup>t</sup> DQSHZ	-	20	_	20	-	20	_	20	_	20	-	20	ns	5
DQS input high pulse width	<sup>t</sup> DQSH	0.4	0.6	0.4	0.6	0.4	0.6	0.4	0.6	0.4	0.6	0.4	0.6	<sup>t</sup> CK	
DQS input low pulse width	<sup>t</sup> DQSL	0.4	0.6	0.4	0.6	0.4	0.6	0.4	0.6	0.4	0.6	0.4	0.6	<sup>t</sup> CK	
DQS-DQ skew	<sup>t</sup> DQSQ	_	5	_	2.5	-	1.7	_	1.3	_	1.0	-	0.85	ns	
Data input	<sup>t</sup> DQSS	0.75	1.25	0.75	1.25	0.75	1.25	0.75	1.25	0.75	1.25	0.75	1.25	<sup>t</sup> CK	
Data In setup	<sup>t</sup> DS	5	-	3	-	2	-	1.5	-	1.1	-	0.8	-	ns	
DQS falling edge from CLK rising – hold	<sup>t</sup> DSH	0.2	-	0.2	-	0.2	-	0.2	-	0.2	-	0.2	-	<sup>t</sup> CK	
DQS falling to CLK rising – set- up	<sup>t</sup> DSS	0.2	_	0.2	_	0.2	_	0.2	_	0.2	_	0.2	_	<sup>t</sup> CK	
Data valid win- dow	<sup>t</sup> DVW		$^{t}$ DVW = $^{t}$ QH - $^{t}$ DQSQ									ns			
Half clock peri- od	tHP		<sup>t</sup> HP = Min( <sup>t</sup> CKH, <sup>t</sup> CKL)									ns			
The deviation of a given <sup>t</sup> CK (abs) from a <sup>t</sup> CK (avg)	<sup>t</sup> JIT (per)	-0.7	0.7	-0.7	0.7	-0.7	0.7	-0.6	0.6	-0.6	0.6	-0.5	0.5	ns	
DQ-DQS hold, DQS to first DQ to go nonvalid, per access	<sup>t</sup> QH		<sup>t</sup> QH = <sup>t</sup> HP - <sup>t</sup> QHS									ns			
Data hold skew factor	<sup>t</sup> QHS	-	6	-	3	-	2	-	1.5	-	1.2	-	1	ns	
Data output to command, ad- dress, or data in- put	<sup>t</sup> RHW	100	-	100	-	100	-	100	-	100	-	100		ns	
Ready to data output	<sup>t</sup> RR	20	_	20	_	20	_	20	_	20	_	20	_	ns	
CLK HIGH to R/ B# LOW	tWB	_	100	_	100	_	100	_	100	_	100	_	100	ns	
Command cycle to data output	tWHR	80	-	80	-	80	_	80	-	80	_	80	_	ns	
DQS write pre- amble	tWPRE	1.5	-	1.5	_	1.5	_	1.5	-	1.5	_	1.5	_	<sup>t</sup> CK	



#### 16Gb, 32Gb Asynchronous/Synchronous NAND Electrical Specifications – AC Characteristics and Operating Conditions (Synchronous)

#### Table 36: AC Characteristics: Synchronous Command, Address, and Data (Continued)

		Mode 0		Mode 1		Mode 2		Mode 3		Mode 4		Mode 5			
Parameter	Symbol	Min	Max	Unit	Notes										
DQS write post- amble	tWPST	1.5	-	1.5	-	1.5	-	1.5	-	1.5	-	1.5	-	<sup>t</sup> CK	
W/R# LOW to data output cy- cle	<sup>t</sup> WRCK	20	-	20	-	20	_	20	_	20	_	20	_	ns	
WP# transition to command cy- cle	tWW	100	-	100	-	100	_	100	-	100	-	100	-	ns	

Notes: 1. Delay is from start of command to next command, address, or data cycle; start of address to next command, address, or data cycle; and end of data to start of next command, address, or data cycle.

- 2. This value is specified in the parameter page.
- 3. <sup>t</sup>CK(avg) is the average clock period over any consecutive 200-cycle window.
- 4. <sup>t</sup>CKH(abs) and <sup>t</sup>CKL(abs) include static offset and duty cycle jitter.
- 5. <sup>t</sup>DQSHZ begins when W/R# is latched HIGH by CLK. This parameter is not referenced to a specific voltage level; it specifies when the device outputs are no longer driving.



# **Electrical Specifications – Array Characteristics**

#### **Table 37: Array Characteristics**

Parameter	Symbol	Тур	Мах	Unit	Notes
Number of partial page programs	NOP	_	1	Cycles	1
ERASE BLOCK operation time	<sup>t</sup> BERS	3.8	10	ms	
Cache busy	<sup>t</sup> CBSY	35	2600	μs	
Change column setup time to data in/out or next command	<sup>t</sup> CCS	_	200	ns	
Dummy busy time	<sup>t</sup> DBSY	0.5	1	μs	
Cache read busy time	<sup>t</sup> RCBSY	3	75	μs	
Busy time for SET FEATURES and GET FEATURES operations	<sup>t</sup> FEAT	_	1	μs	
Busy time for interface change	<sup>t</sup> ITC	_	1	μs	2
LAST PAGE PROGRAM operation time	<sup>t</sup> LPROG	_	-	μs	3
Busy time for OTP DATA PROGRAM operation if OTP is protected	tOBSY	_	40	μs	
Power-on reset time	<sup>t</sup> POR	_	1	ms	
PROGRAM PAGE operation time	<sup>t</sup> PROG	1300	2600	μs	
READ PAGE operation time	<sup>t</sup> R	_	75	μs	
Device reset time (Read/Program/Erase)	<sup>t</sup> RST	-	5/10/500	μs	4

Notes: 1. The pages in the OTP Block have an NOP of 4.

- <sup>t</sup>ITC (MAX) is the busy time when the interface changes from asynchronous to synchronous using the SET FEATURES (EFh) command or synchronous to asynchronous using the RESET (FFh) command. During the <sup>t</sup>ITC time, any command, including READ STATUS (70h) and READ STATUS ENHANCED (78h), is prohibited.
- 3. <sup>t</sup>LPROG = <sup>t</sup>PROG (last page) + <sup>t</sup>PROG (last page 1) command load time (last page) address load time (last page) data load time (last page).
- 4. If RESET command is issued when the target is READY, the target goes busy for a maximum of  $5\mu$ s.



# **Asynchronous Interface Timing Diagrams**

#### Figure 63: RESET Operation









# Figure 65: READ STATUS Cycle



#### Figure 66: READ STATUS ENHANCED Cycle





#### Figure 67: READ PARAMETER PAGE



#### Figure 68: READ PAGE





#### Figure 69: READ PAGE Operation with CE# "Don't Care"





#### Figure 70: CHANGE READ COLUMN





# Figure 71: READ PAGE CACHE SEQUENTIAL





#### Figure 72: READ PAGE CACHE RANDOM





#### Figure 73: READ ID Operation









#### Figure 75: PROGRAM PAGE Operation with CE# "Don't Care"



Figure 76: PROGRAM PAGE Operation with CHANGE WRITE COLUMN





# Figure 77: PROGRAM PAGE CACHE



# Figure 78: PROGRAM PAGE CACHE Ending on 15h





#### Figure 79: COPYBACK



#### Figure 80: ERASE BLOCK Operation





# **Synchronous Interface Timing Diagrams**

#### Figure 81: SET FEATURES Operation



- Notes: 1. When CE# remains LOW, <sup>t</sup>CAD begins at the rising edge of the clock from which the last data byte is input for the subsequent command or data input cycle(s).
  - 2. <sup>t</sup>DSH (MIN) generally occurs during <sup>t</sup>DQSS (MIN).
  - 3. <sup>t</sup>DSS (MIN) generally occurs during <sup>t</sup>DQSS (MAX).
  - 4. The cycle that <sup>t</sup>CAD is measured from may be an idle cycle (as shown), another command cycle, an address cycle, or a data cycle. The idle cycle is shown in this diagram for simplicity.



#### Figure 82: READ ID Operation





# Figure 83: GET FEATURES Operation





# Figure 84: RESET (FCh) Operation





#### Figure 85: READ STATUS Cycle





# Figure 86: READ STATUS ENHANCED Operation





#### Figure 87: READ PARAMETER PAGE Operation





#### Figure 88: READ PAGE Operation





#### Figure 89: CHANGE READ COLUMN





#### Figure 90: READ PAGE CACHE SEQUENTIAL (1 of 2)





#### Figure 91: READ PAGE CACHE SEQUENTIAL (2 of 2)





# Figure 92: READ PAGE CACHE RANDOM (1 of 2)



#### Figure 93: READ PAGE CACHE RANDOM (2 of 2)





# Figure 94: Multi-Plane Read Page (1 of 2)





# Figure 95: Multi-Plane Read Page (2 of 2)





#### Figure 96: PROGRAM PAGE Operation (1 of 2)



#### Figure 97: PROGRAM PAGE Operation (2 of 2)



Don't Care Driven



#### Figure 98: CHANGE WRITE COLUMN





#### Figure 99: Multi-Plane Program Page





#### Figure 100: ERASE BLOCK



Don't Care Driven

# Figure 101: COPYBACK (1 of 3)





#### Figure 102: COPYBACK (2 of 3)



# Figure 103: COPYBACK (3 of 3)





# Figure 104: READ OTP PAGE





# Figure 105: PROGRAM OTP PAGE (1 of 2)



# Figure 106: PROGRAM OTP PAGE (2 of 2)




## 16Gb, 32Gb Asynchronous/Synchronous NAND Synchronous Interface Timing Diagrams

## Figure 107: PROTECT OTP AREA





# **Revision History**

## **Rev. C Production – 3/11**

- Noted synchronous TSOP support to synchronous timing mode 4.
- · Corrected clock rate to match timing mode on features page.
- Corrected READ ID table values.
- Updated parameter page capacitance values, rev, and CRC.
- Updated Drive Strength Impedance table.
- Updated DC Characteristics (Sync) table, Icc4R/W\_5, from 10/20 to 20/27 (typ/max).
- Added device reset time to Array Characteristics table.

## Rev. B – 2/11

- Updated features page to show synchronous timing mode 4 (reflects parameter page).
- Added synchronous devices (updated title and features page, part numbering figure, READ ID table, and parameter page table).
- Changed <sup>t</sup>PROG MAX from 2500µs to 2600µs.
- Changed <sup>t</sup>BERS from 3ms to 3.8ms.
- Changed  $I_{CC}4,$  I/O burst current, from 5mA to 8mA.
- Updated C<sub>IN</sub> and C<sub>IO</sub> capacitance values.

## Rev. A - 7/10

• Initial release.

8000 S. Federal Way, P.O. Box 6, Boise, ID 83707-0006, Tel: 208-368-3900 www.micron.com/productsupport Customer Comment Line: 800-932-4992 Micron and the Micron logo are trademarks of Micron Technology, Inc. All other trademarks are the property of their respective owners. This data sheet contains minimum and maximum limits specified over the power supply and temperature range set forth herein.

Although considered final, these specifications are subject to change, as further product development and data characterization sometimes occur.